



SHAD

HONDA CB 650R '19- H0CR61SR

BCN

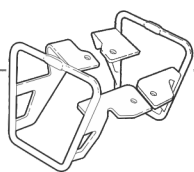

1 263078 x1 →
263079 x1 ←

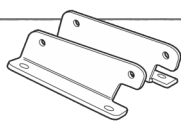

2 262751 x1 →
262752 x1 ←



3 304053 x4
M8 x30
DIN 7380



4 303045 x 8
Ø8



5 260648 x6
Ø16 Ø9 x 5



6 302024 x4
M8



7 261042 x 2
Ø16 Ø9 x 15



8 304039 x4
M8 x40
DIN 7380

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.


ATTENTION: For a full equip assembly, mount the Side bag holder system before the Top master.

CB 650R ('19-'20)


1

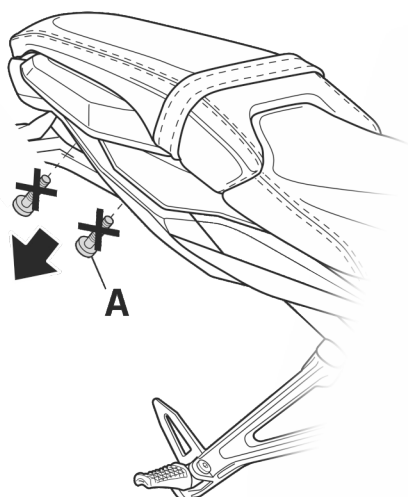


2

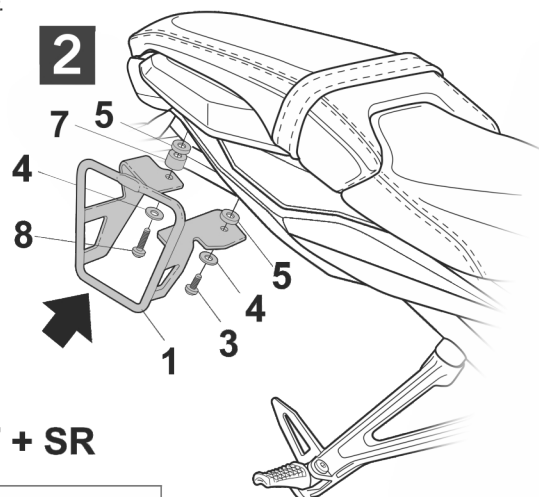


DETALLE ST + SR

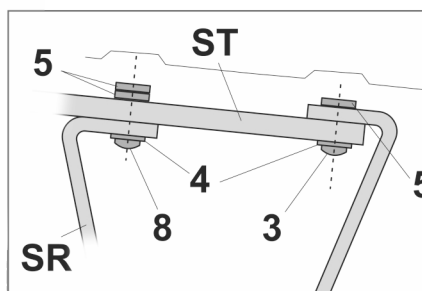

3

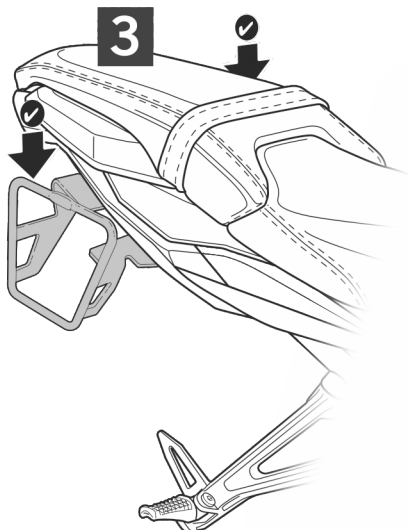

TOP MASTER + SR





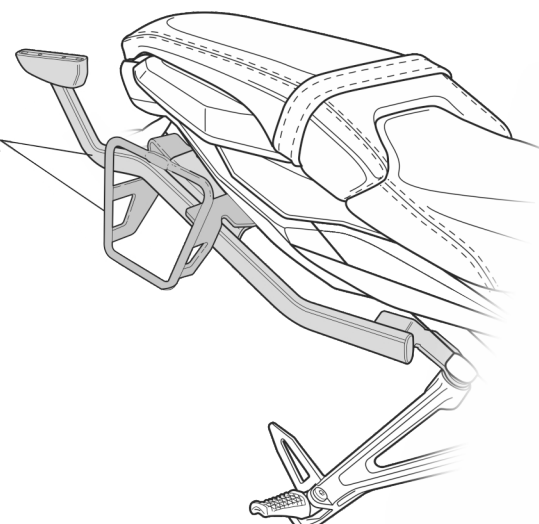


IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

SHAD

CB 650R '21-

HONDA CB 650R '19-
H0CR61SR

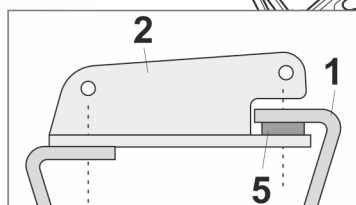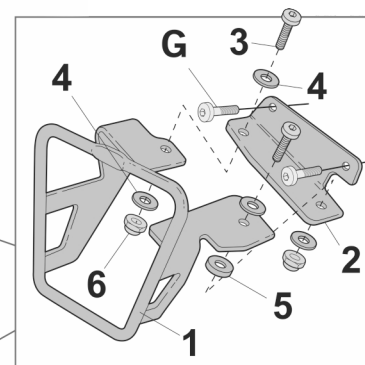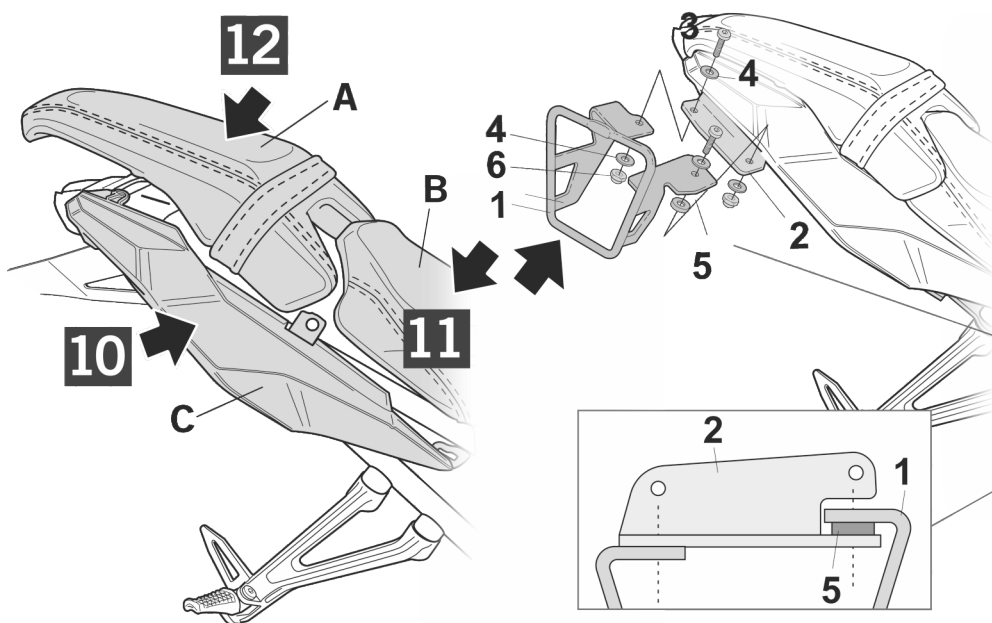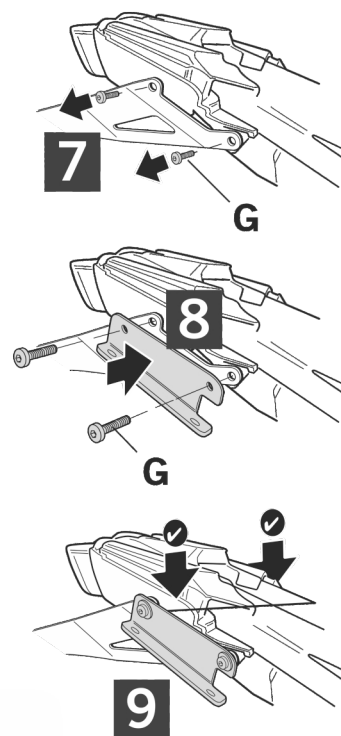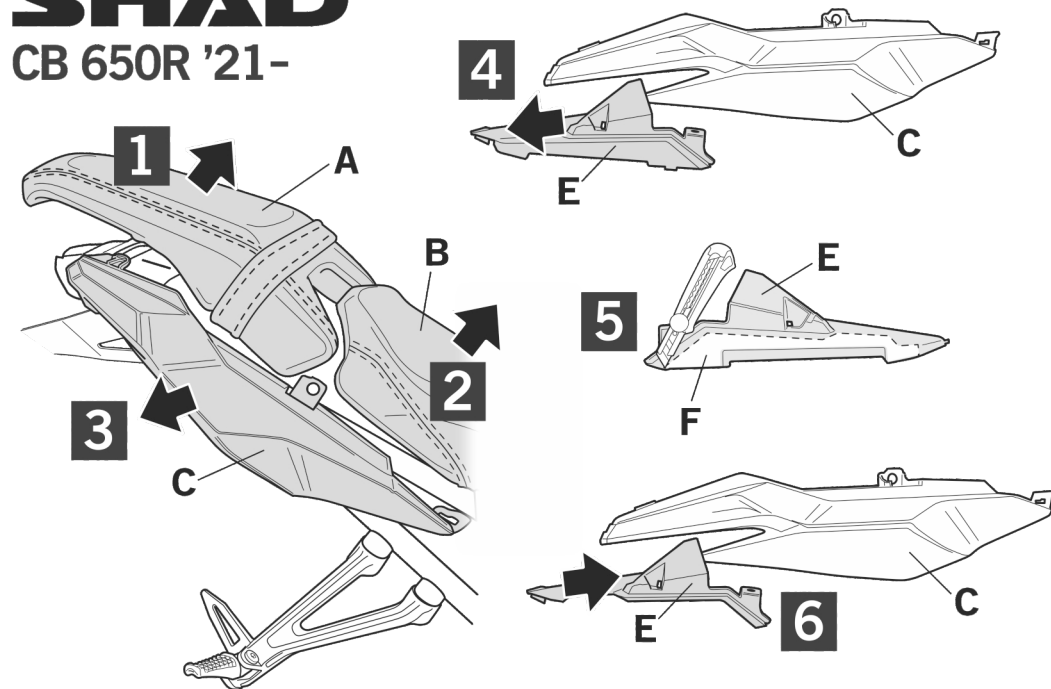

DETALLE ST + SR

