

DIFFICULTY LEVEL

SHAD

KYMCO CV3 550 '22 - KYMCO CV3 575 '25 K0CV55IF

3P
SYSTEM

BCN

1 263162 x 1
263163 x 1

2 260731 x 2
Ø16 Ø11 x 10

3 303045 x 12
Ø8

4 303027 x 8
Ø8

5 304172 x 2
M8x70 DIN 7380

6 260641 x 2
Ø16 Ø9 x 22

7 304124 x 2
M8x90 DIN912

8 260596 x 4
Ø16 Ø9 x 20

9 304169 x 4
M8x50 DIN 7380

10 304174 x 2
M8x80 DIN7380

11 260523 x 4
Ø16 Ø9 x 25

12 304170 x 4
M8x60 DIN 7380

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months..





(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.


(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi..

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.


ATTENTION: For a full assembly, mount the 3P System after the Kit Topmaster.

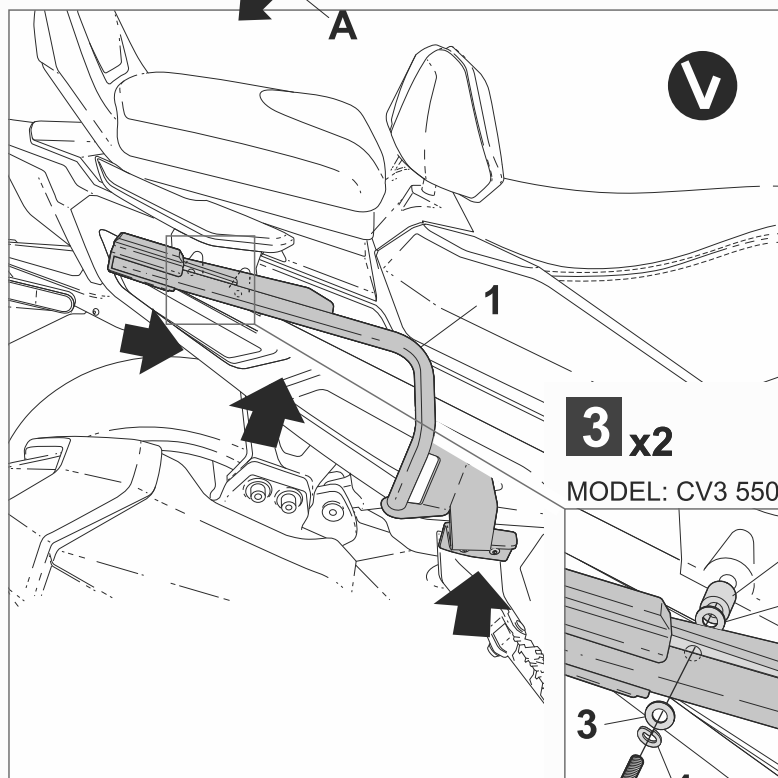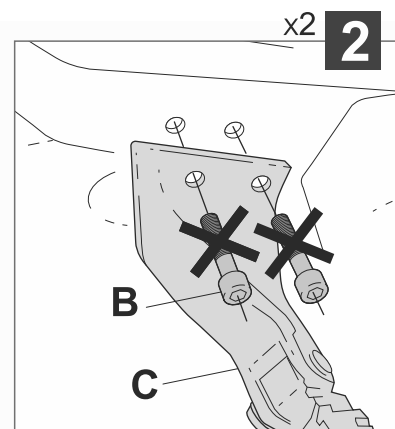
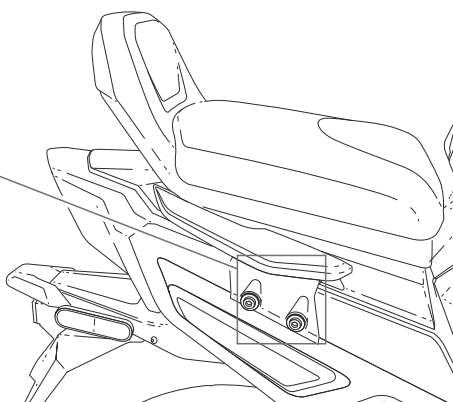
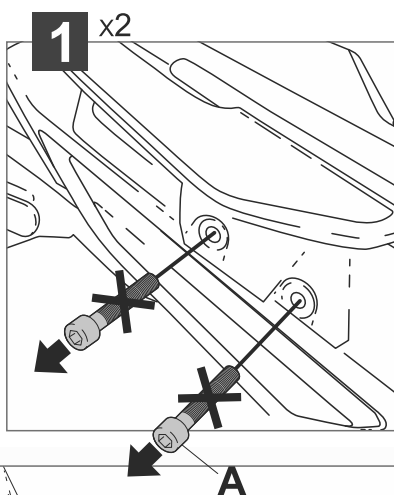


3 x2
MODEL: CV3 550

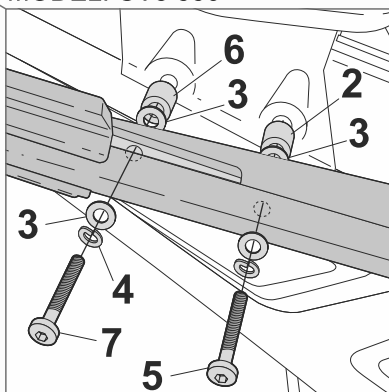

3* x2
MODEL: CV3 575

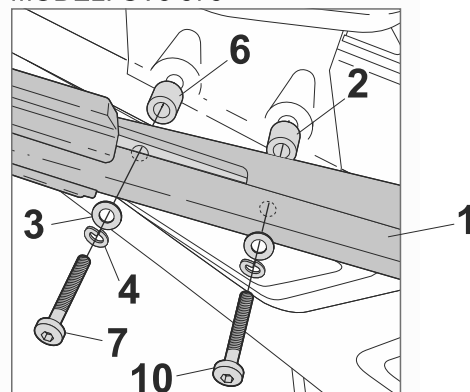

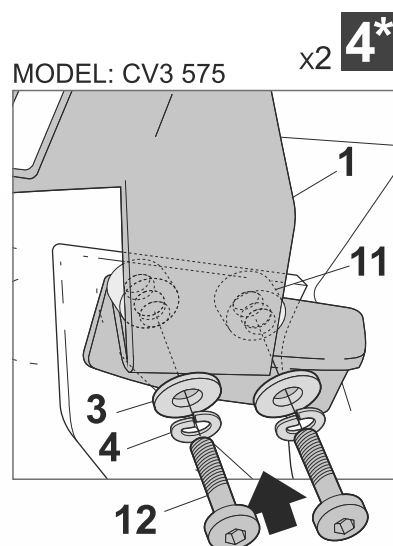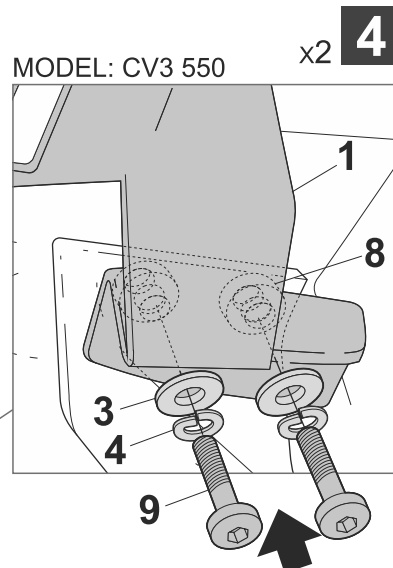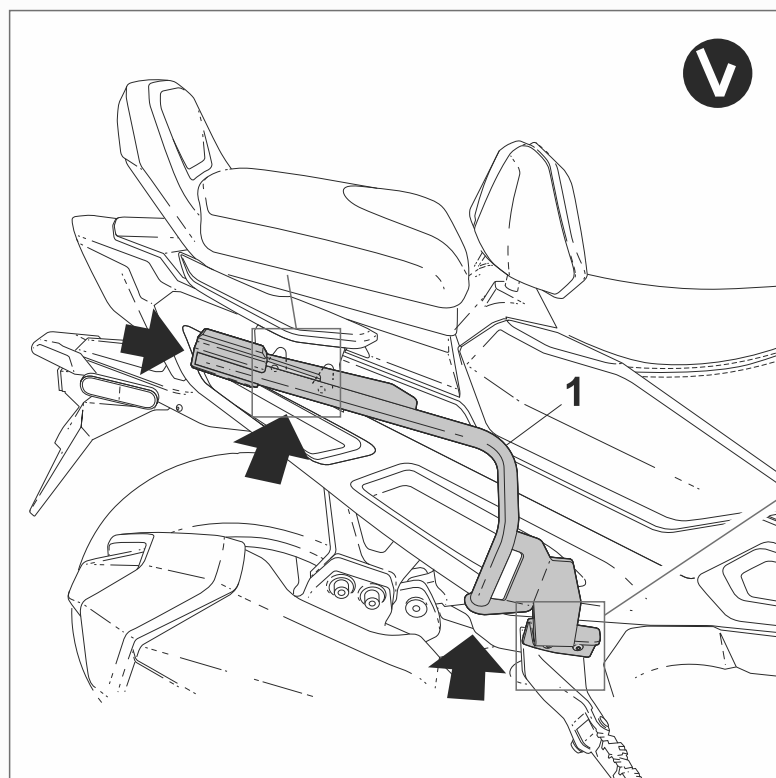

K0CV52ST
+
K0CV55IF

