


SHAD

KTM 390 ADVENTURE '20-

TOP KITS K0DK30IST

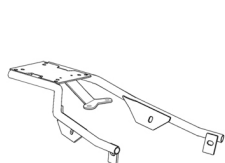

1 K0DK30IST-IM x1



2 K0DK30IF-02 x1
SUPPORT PLATE REAR



3 K0DK30IF-02 x1
SUPPOR PLATE FRONT



4 EOD019 x2
BOLT M8X50 DIN912



5 EOD017 x2
BOLT M8X40 DIN912



6 EOD028 x8
FLAT WASHER M8



7 EOD015 x4
BOLT M8X30 DIN912



8 FOD012 x4
BUSHING Ø16 Ø10X10



9 FOD011 x4
BUSHING Ø16 Ø10X5



10 EOD035 x2
NYLON NUT M8



11 EOD053 x6
SPLIT LOCK WASHER M8

WARNING!








(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

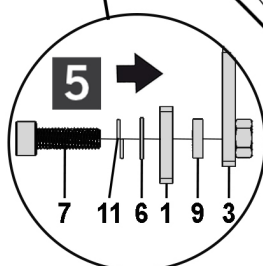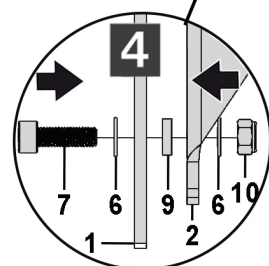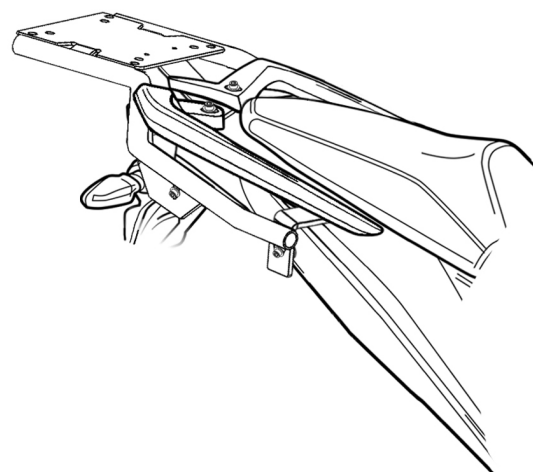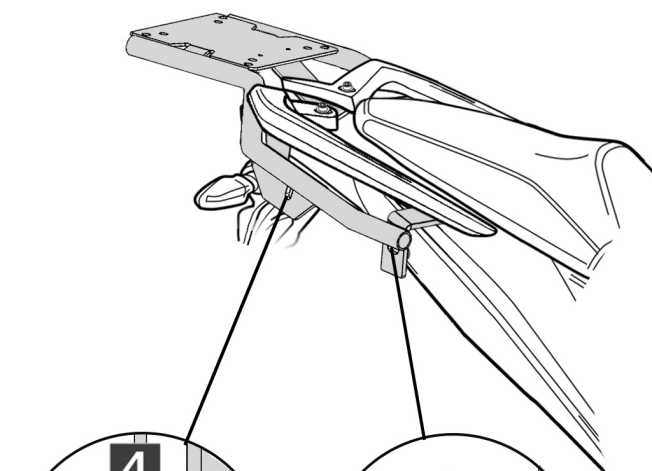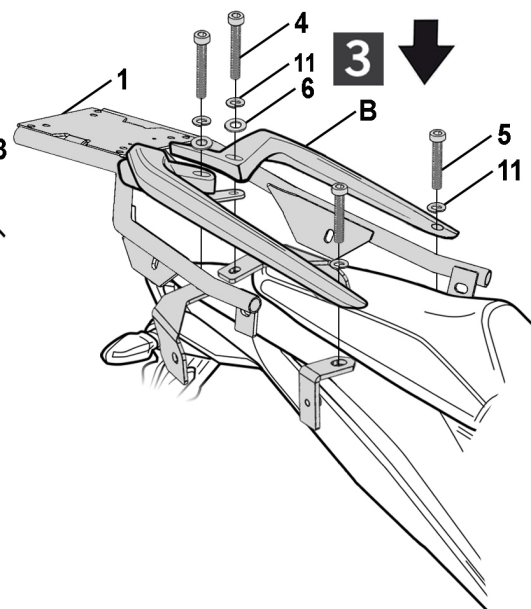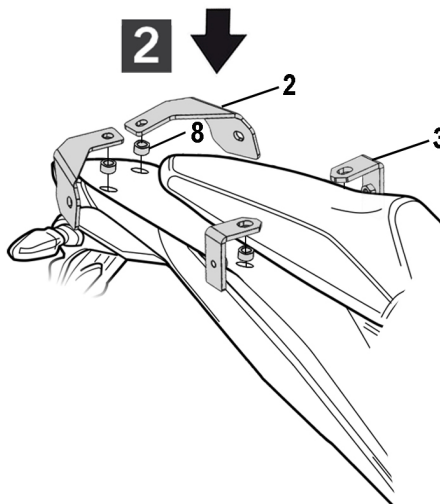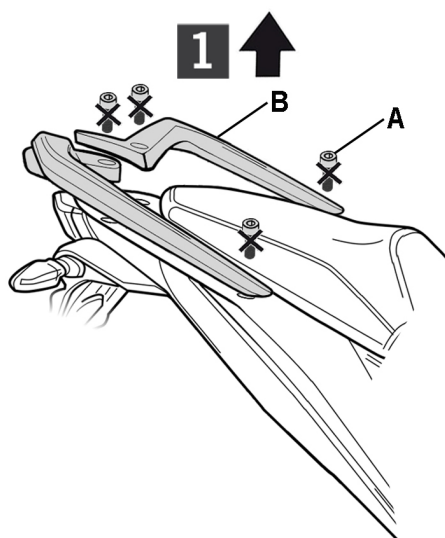

WWW.SHAD.ES

N° 98 Edition 0