

SHAD

KYMCO DOWN TOWN 125i / 300i / 350i '15

KIT RESPALDO KODW15RV



1 261872 x1




2 260641 x2
Ø16 Ø9 x 22



3 303020 x2
Ø8



4 304273 x2
M8 x 120 Din 912

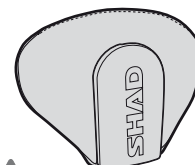

NOT INCLUDED



WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D





Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

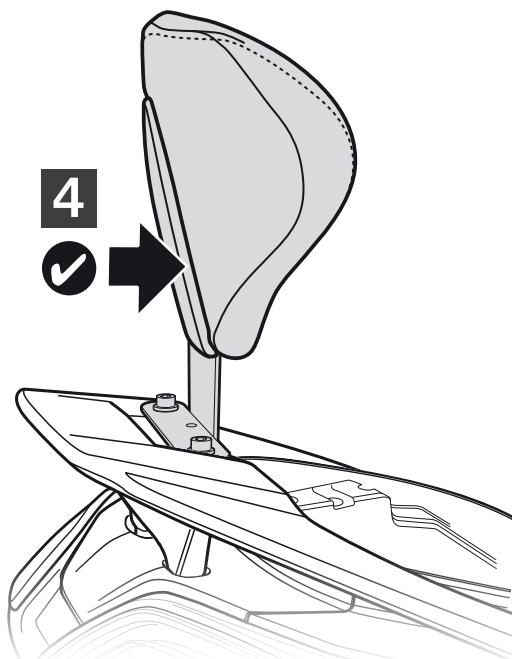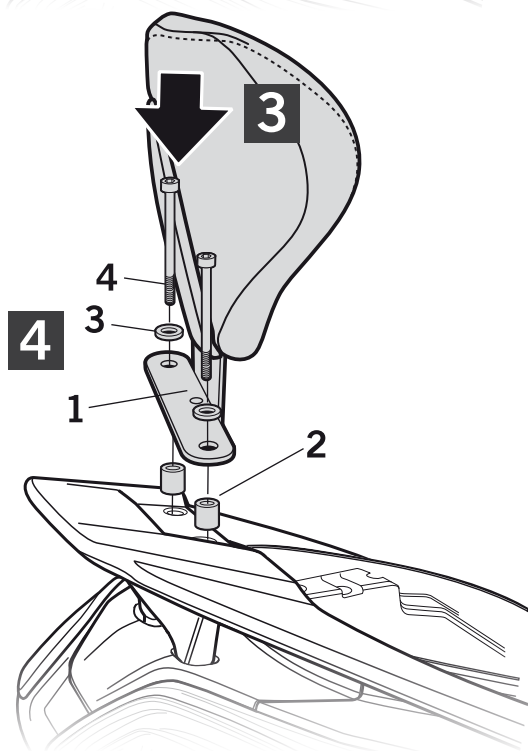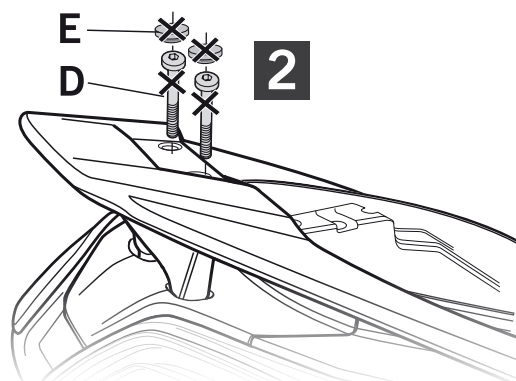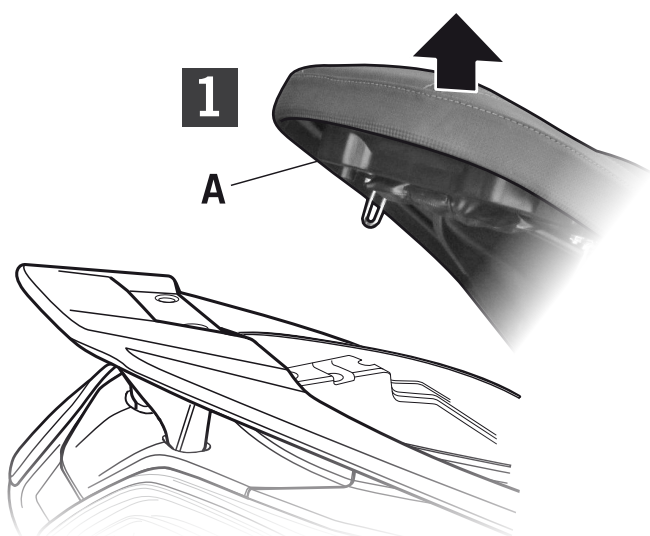

www.shad.es

REF. 500479 Edición 1ª