


SHAD

MACBOR MONTANA XR5 500 20- M0XR524P

4P
SYSTEM

BCN

1 263124 x1 →
263125 x1 ←

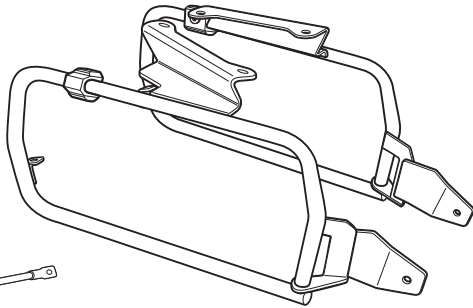

8 263126 x1

2 261072 x4
Ø20 Ø9 x 32



5 304169 x4
M8x50 DIN 7380



9 304052 x2
M6x20 DIN 7380



3 303045 x8
Ø8



6 304028 x2
M8x25 DIN 7380



10 303017 x4
Ø6



4 303027 x4
Ø8



7 302024 x2
M8



11 302021 x2
M6

WARNING! ⚠




GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

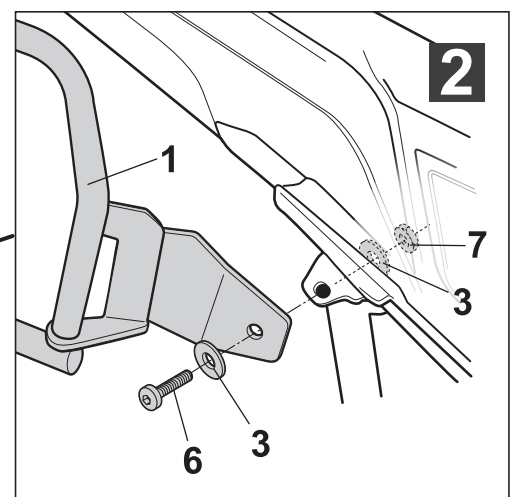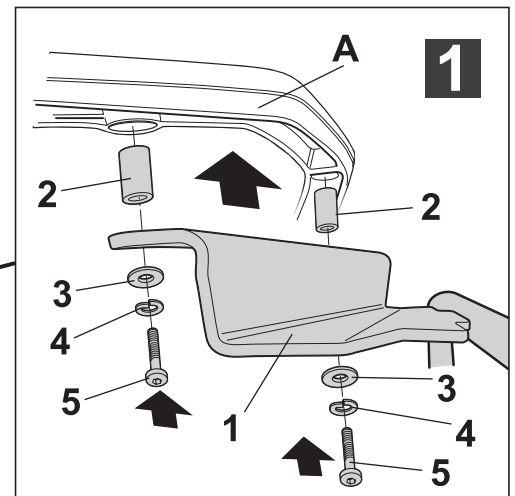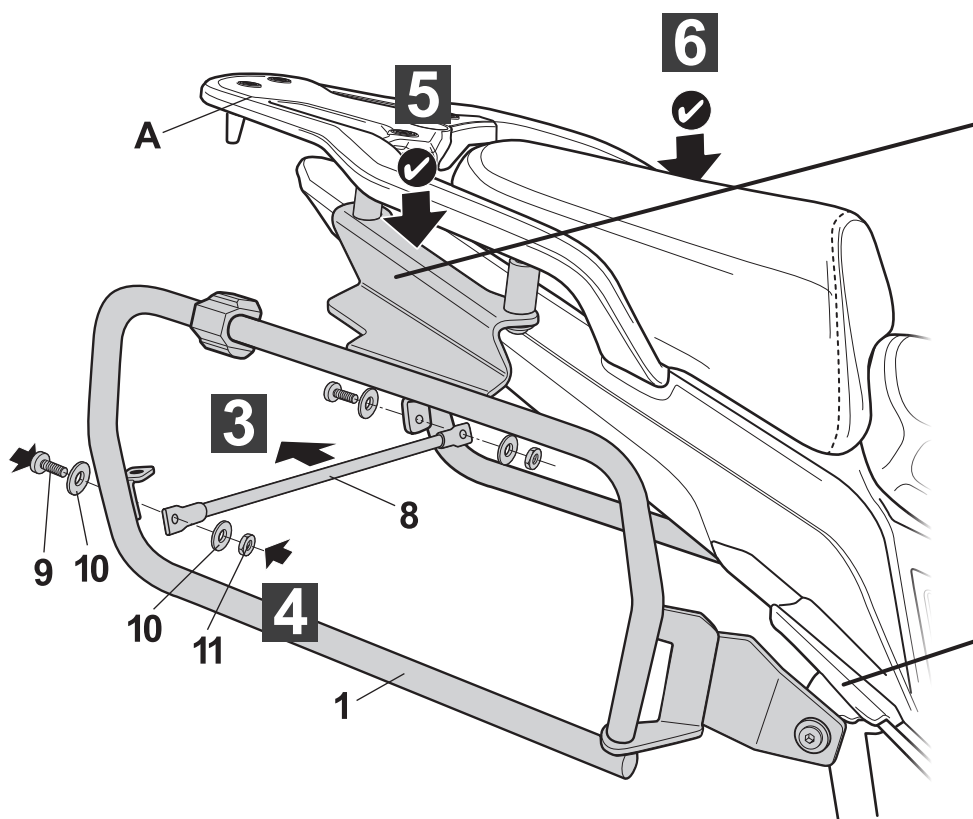

WWW.SHAD.ES

REF. 500479 Edition 1ª

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es