


# SHAD

## ROYAL ENFIELD SUPER METEOR 650 '23

### KIT SISSY BAR R0SP63SN

BCN

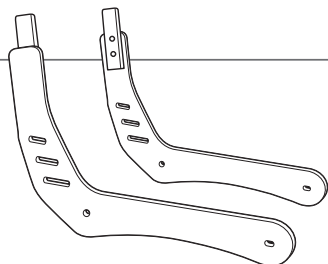

**1** 263269 x1 →  
263270 x1 ←



**2** H1RC00 x1



**3** 303027 x8  
Ø8



**6** 260731 x4  
Ø16 Ø11 x 10



**4** 303020 x4  
Ø8



**7** 303045 x4  
Ø8



**5** 304211 x4  
M8x15 DIN 933



**8** 304039 x4  
M8x40 DIN 7380

## WARNING!

**GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.




**E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

**D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.





**I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

**F** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

**ATTENTION:** For a full equip assembly, mount the 3P system after the sissybar.

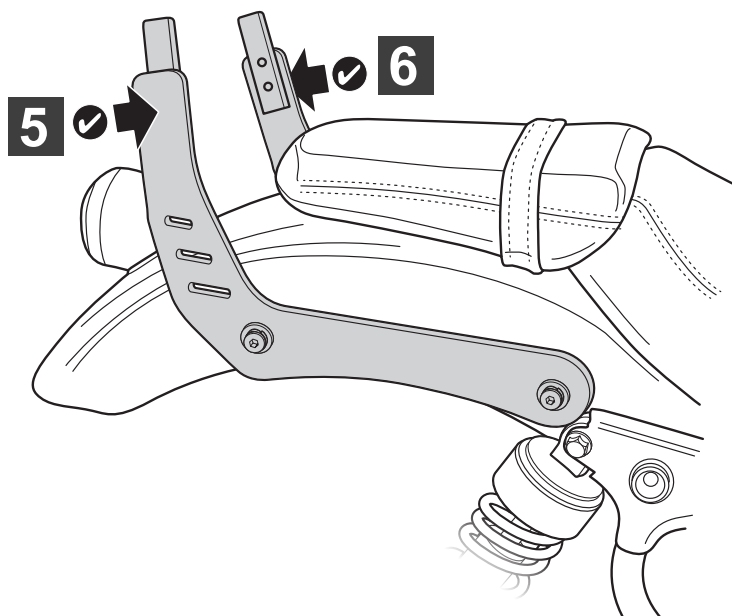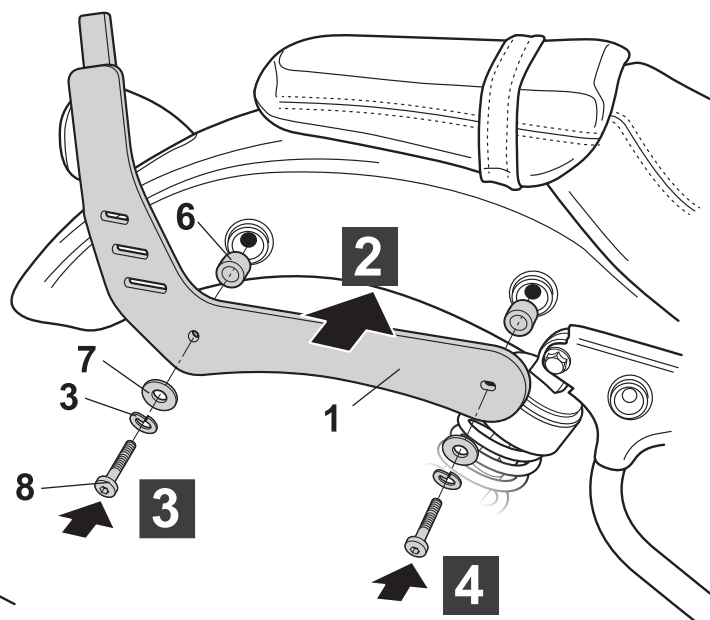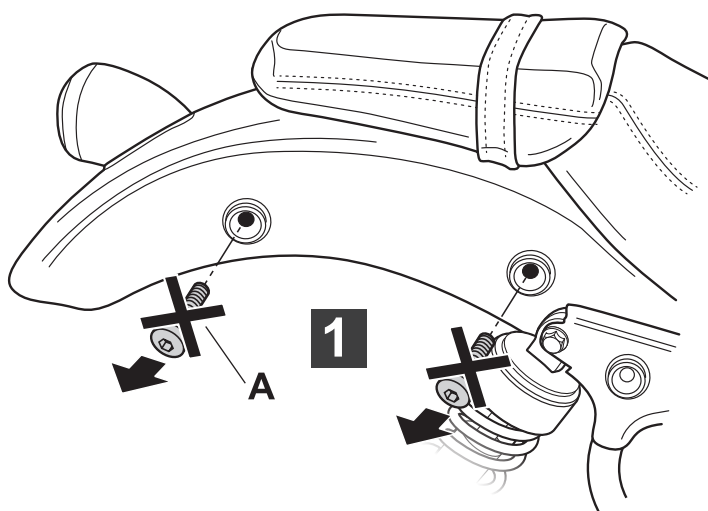

**IMPORTANT:** Based on European models.  
For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

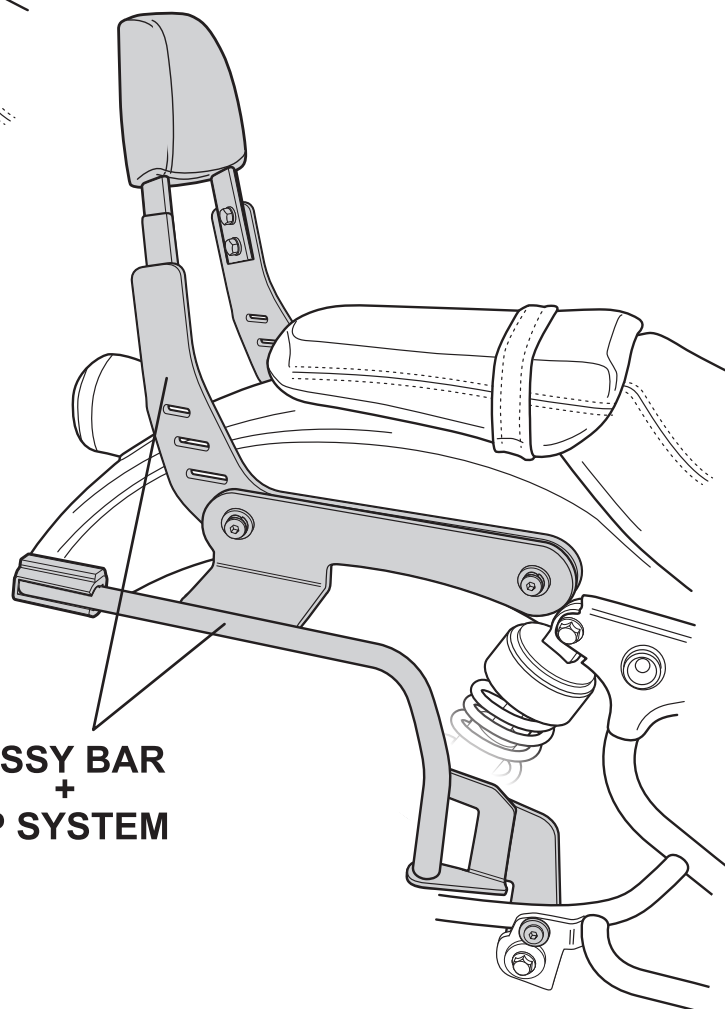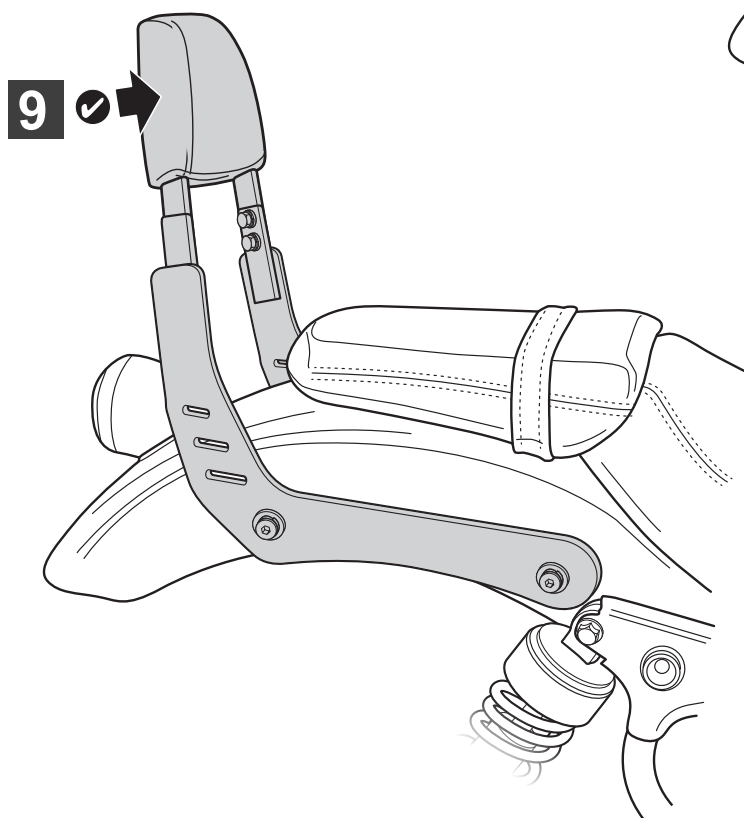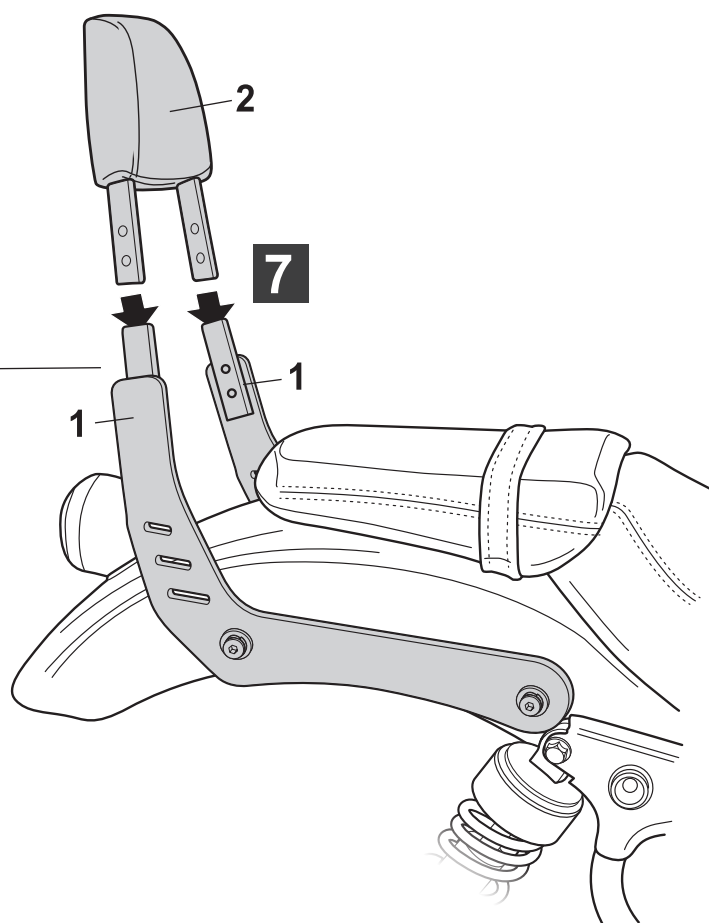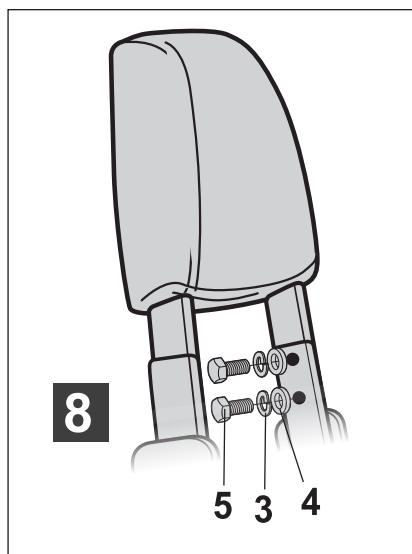

**SISSY BAR  
+  
3P SYSTEM**