


SHAD

VOGE 300 DS '21 TOP MASTER V0DS31ST

BCN

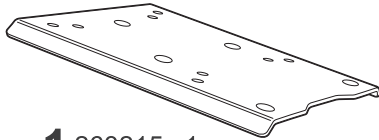

1 263215 x1



2 260641 x2
Ø16 Ø9 x 22



3 304225 x2
M6x45 DIN 7991



4 260731 x2
Ø16 Ø9 x 10



5 304029 x2
M6x35 DIN 7991



6 304091 x1
M6x20 DIN 7991

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

