



DIFFICULTY LEVEL


SHAD

VOGE DS 800 RALLY '25

3P
SYSTEM

BCN

V0DS85IF

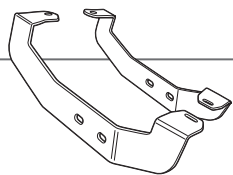

1 263692 x1 →
263693 x1 ←




2 303045 x12
Ø8



3 303027 x6
Ø8



4 304028 x6
M8x25 DIN 7380

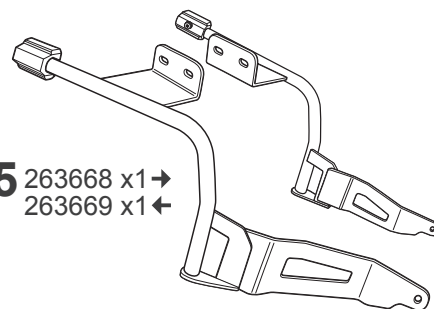


5 263668 x1 →
263669 x1 ←



6 302024 x4
M8



7 260596 x2
Ø16 Ø9 x 20



8 304169 x2
M8x50 DIN 7380

WARNING!


(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

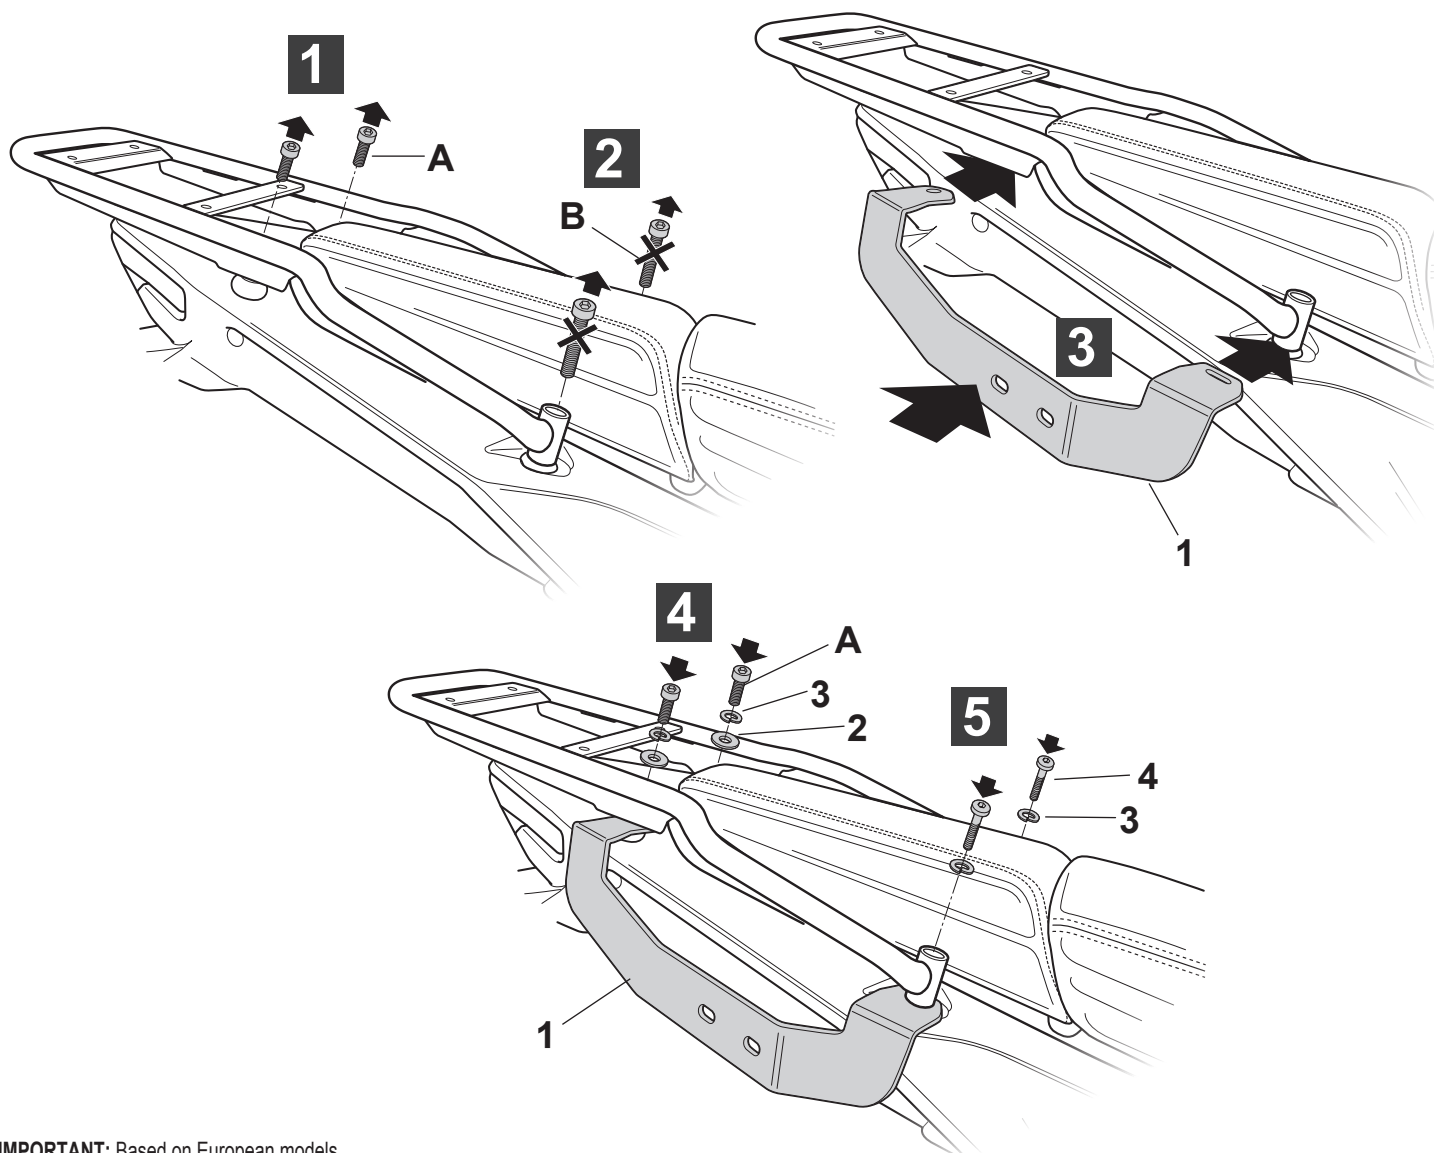

IMPORTANT: Based on European models.

For compatibility with models in other continents, check www.shad.es

