

SHAD

BMW F900 R / XR '20 - W0FR91SR



1 262969 x 1 →
262970 x 1 ←

2 260213 x 2
Ø16 Ø9 x 12

3 302027 x 4
Ø8

4 303045 x 4
Ø8

5 304272 x 4
M8x35 DIN 7380

6 260417 x 2
Ø16 Ø9 x 16

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

1

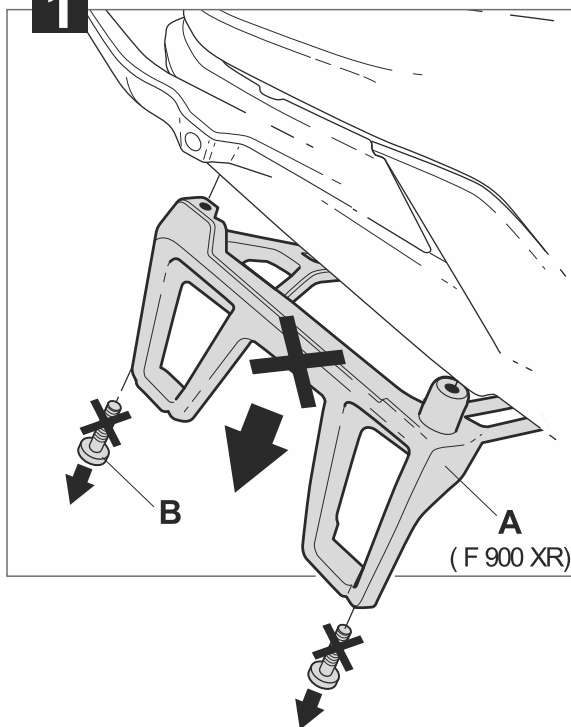

2

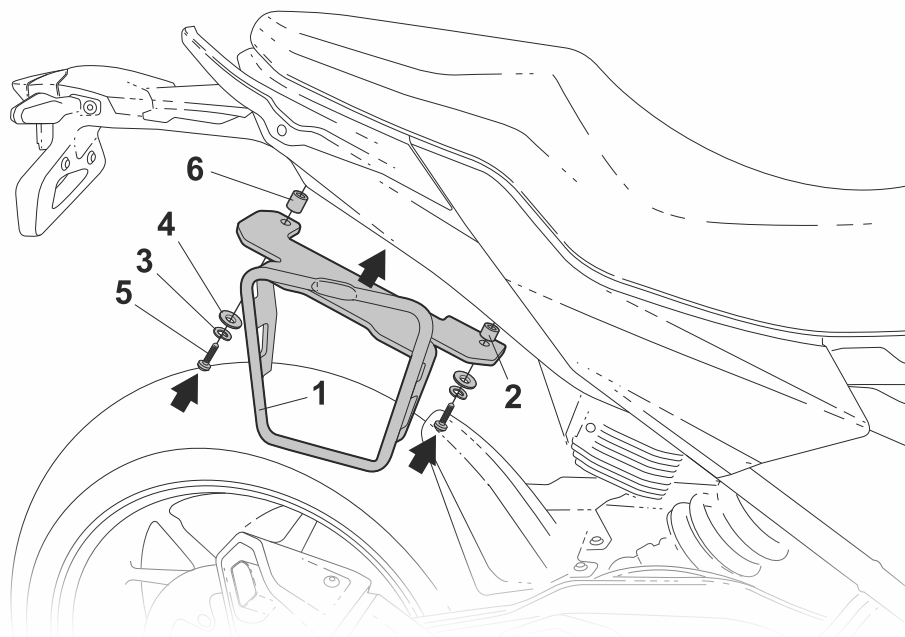

TOP MASTER



SR

WWW.SHAD.ES

REF. 500479 Edition 1ª

IMPORTANT: Based on European models.

For compatibility with models in other continents, check www.shad.es