


BMW R NINE T 1200 '13 -'19
NINE T PURE 1200 '15 -'19
NINE T SCRAMBLER 1200 '16 -'19
NINE T RACER 1200 '17 -'19
NINE T URBAN 1200 G/S '17 -'19




KIT CAFE RACER
WONT13SR

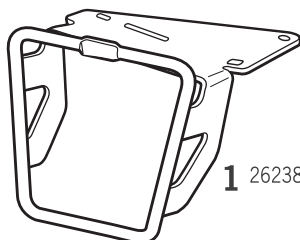

1 262382 x1



2 261042 x1
 Ø16 Ø9 x 15



3 300025 x1
 M5 x 50 Din 912



4 303017 x3
 Ø6



5 260686 x2
 Ø16 Ø9 x 8



6 304106 x2
 M5 x 30 Din 912



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)



Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

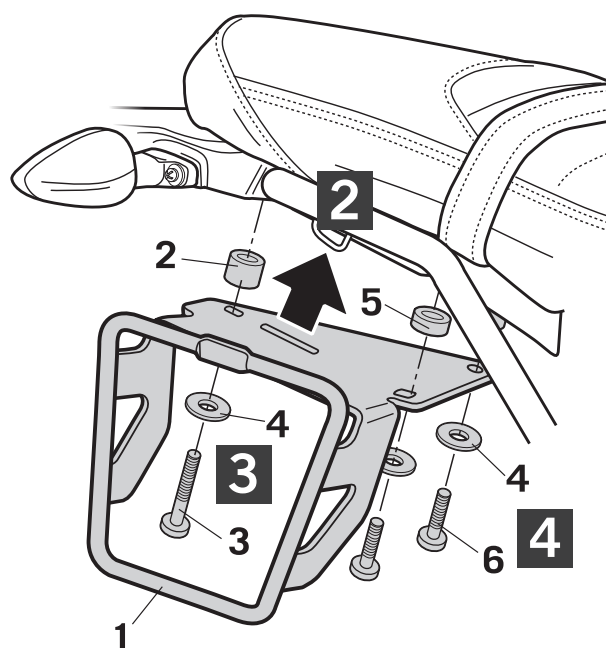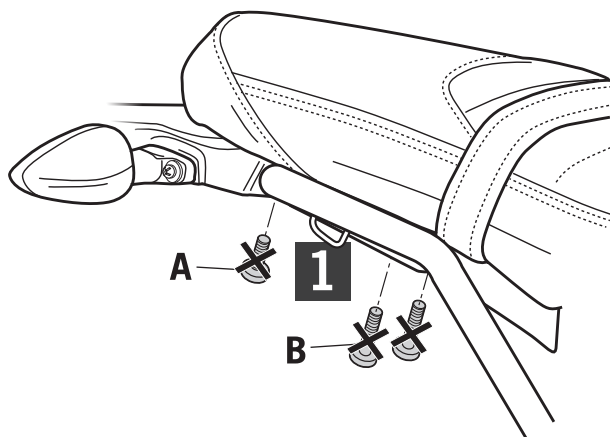

5