


SHAD

ZONTES G1 125 '20

KIT CAFE RACER ZOG110SR

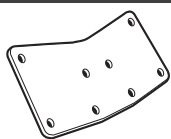


1 262665 x1



2 260213 x4
Ø16 Ø9 x12




3 303045 x12
Ø8



4 304169 x4
M8 x 50
DIN 7380



5 262668 x1 →
262669 x1 ←



6 304053 x4
M8 x 30
DIN 7380



7 302024 x4
M8



WARNING!

ⒼⒷ Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


Ⓔ No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

Ⓓ Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

Ⓘ Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

Ⓕ Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the cafe racer before the top master.

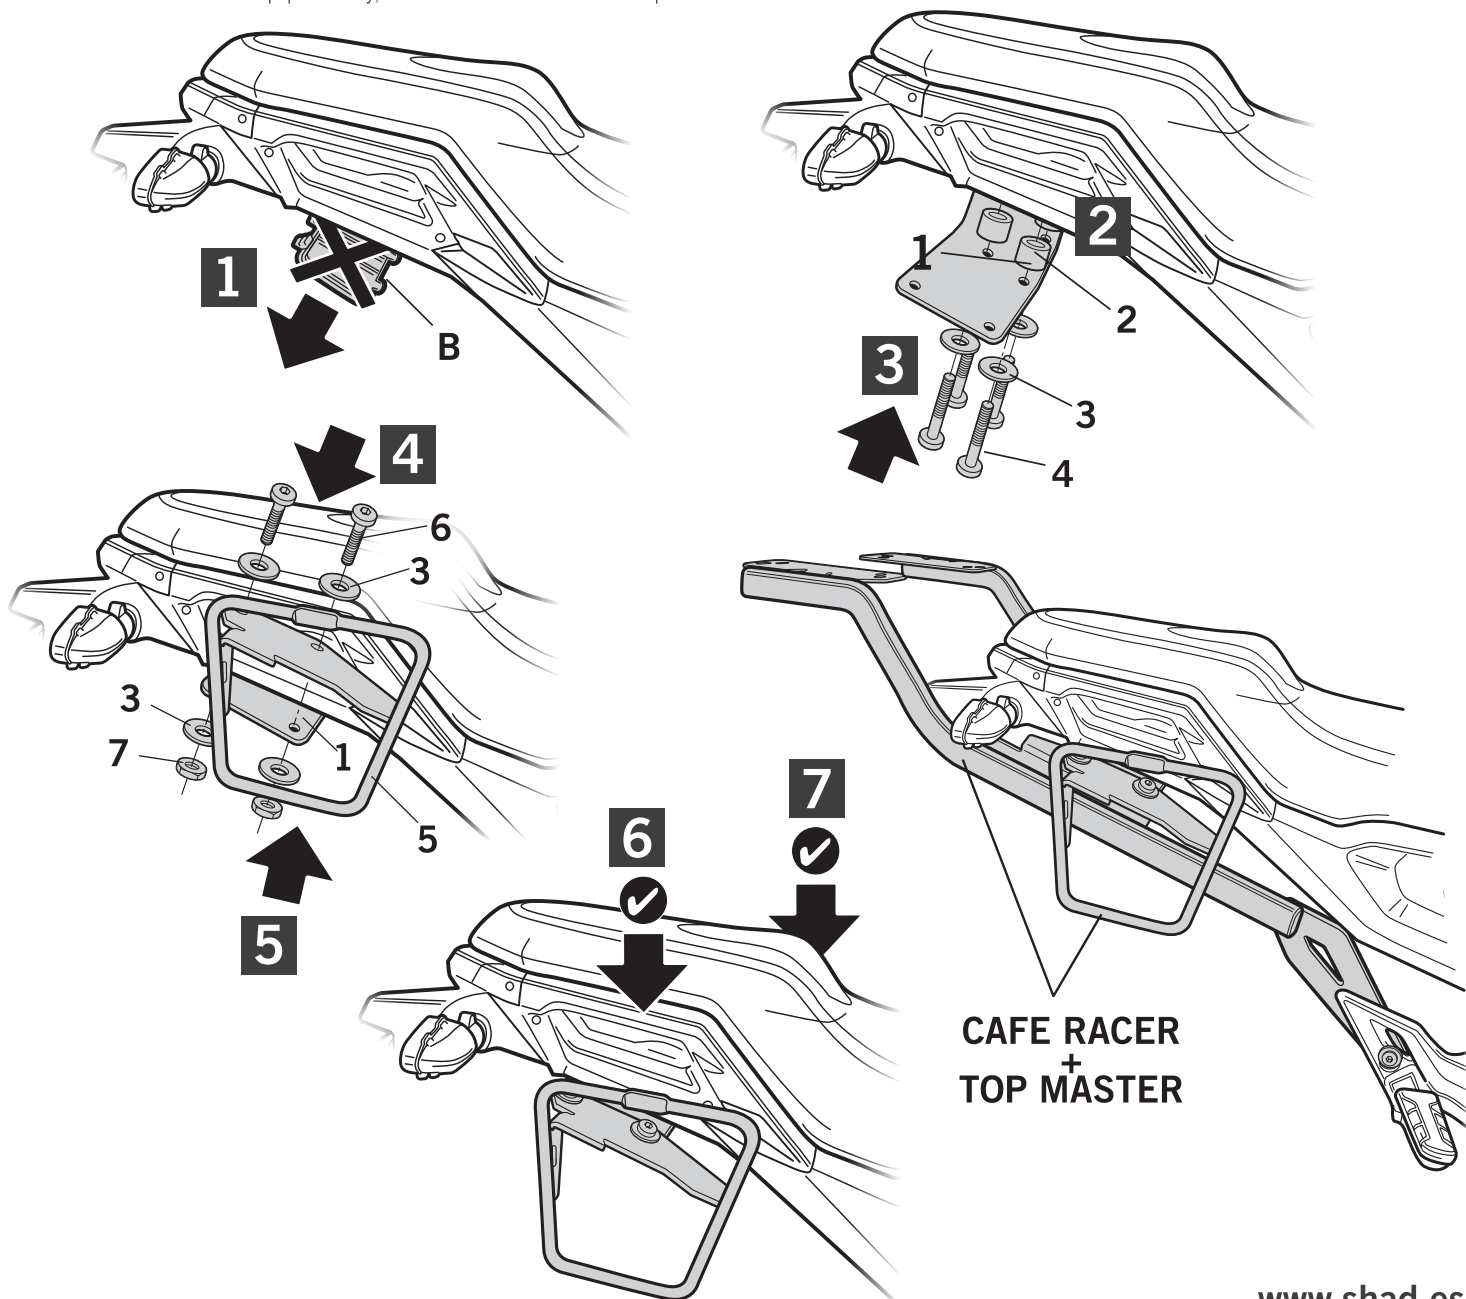

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

www.shad.es

REF. 500479 Edición 1ª