



Do not use
Aluminium spacer
Cod. 205866



ORIGINAL FRAME

Please remove two
original rubber silent-block
located inside

Db-killer N°52
Cod.308421801

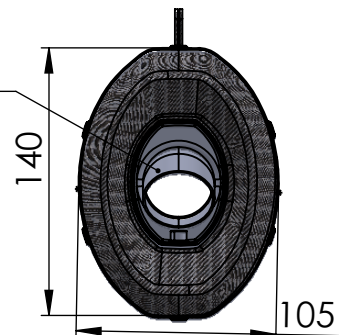

Bracket black S.s
Cod. 3014336501

Knurled collar nut
M6 Cod.200333

**NB.Brand Leovince
on this side**

Aluminium spacer
Cod. 205771


Carbon clamp FR2
cod.308448501

Knurled collar nut
M8 Cod.200298

2x Aluminium spacer
 $\varnothing 29\text{-}\varnothing 23.5 \times \varnothing 8.5 \times h7$
Cod. 205153

Aluminium spacer
 $\varnothing 27 \times 8.5$
Cod. 204321

Allen screw M8X45
T.C.E.I.Z.B.
Cod.201450

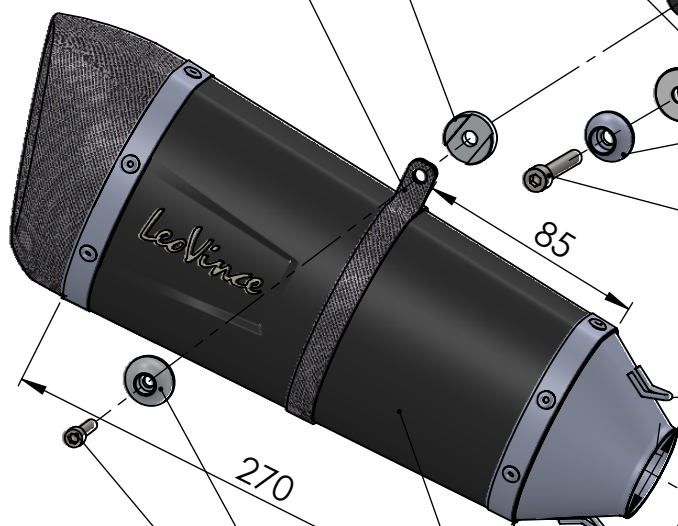

Allen screw M6X25
T.C.E.I.Z.B.
Cod.200586

Aluminium spacer
 $\varnothing 27 \times \varnothing 6.5$
Cod. 205767

FACTORY S Stainless s. black
 $\varnothing i 54 \times 270$ RHS
Cod.3014336485U

Pipe N°1310 s.s
cod. 3014336201

2x Short helical
spring tensile
cod. 303949001

Strap in S.s. $\varnothing 57$
Cod.300057530

**DO NOT
USE ORIGINAL
GRAPHITE
BUSHING**

ART. 14336SBU

KAWASAKI NINJA 1000 SX / TOURER (fits with original panniers)

SLIP-ON -FACTORY-S - BLACK - APPROVED