

# TRIUMPH TIGER 900 GT / GT LOW / GT PRO / RALLY / RALLY PRO '20-

## M O U N T I N G I N S T R U C T I O N S

REF 20379

REAR MUDGUARD / GUARDABARROS TRASERO



1 Person



30 min



MEDIUM







ALLEN  
Nº 3  
Nº 4  
Nº 5



ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Guardabarros	Mudguard	1	20379J/CM3
2		Soporte	Support	1	SOPORIP2--20379
3		Tuerca enjaulada de aluminio M6 (se suministra montada)	Lock nut M6 (supplied mounted)	2	TUERCAJFM6--716
4		Tornillo Allen M6x20 Ø14 ISO7380	M6x20 Ø14 ISO7380 Allen screw	2	TORNI-I7380-404
5		Tornillo Allen M6x25 Ø14 ISO 7380	M6x25 Ø14 ISO 7380 Allen screw	1	TORNI-I7380-405
6		Tornillo Allen M6x30 Ø14 ISO 7380	M6x30 Ø14 ISO 7380 Allen screw	1	TORNI-I7380-626
7		Tapón tornillo M6	M6 screw cap	4	TAPON-----86
8		Silentblock Ø18x Ø9 xØ11 x8	Ø18x Ø9 xØ11 x8 silentblock	4	SILENBGONE--064
9		Casquillo con valona Ø15 xØ9 x7,5	Ø15 xØ9 x7,5 bush with flange	4	CASQUI-1A---324
10		Casquillo Ø14x Ø8,5 X9	Ø14x Ø8,5 X9 arrowhead	1	CASQUI-----777
11		Casquillo Ø14x Ø8,5 x12	Ø14x Ø8,5 x12 arrowhead	1	CASQUI-M---769
12		Tornillo M6x15 DIN912	M6x15 DIN912 screw	2	TORNI-AD912-430

# TRIUMPH TIGER 900 GT / GT LOW / GT PRO / RALLY / RALLY PRO '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

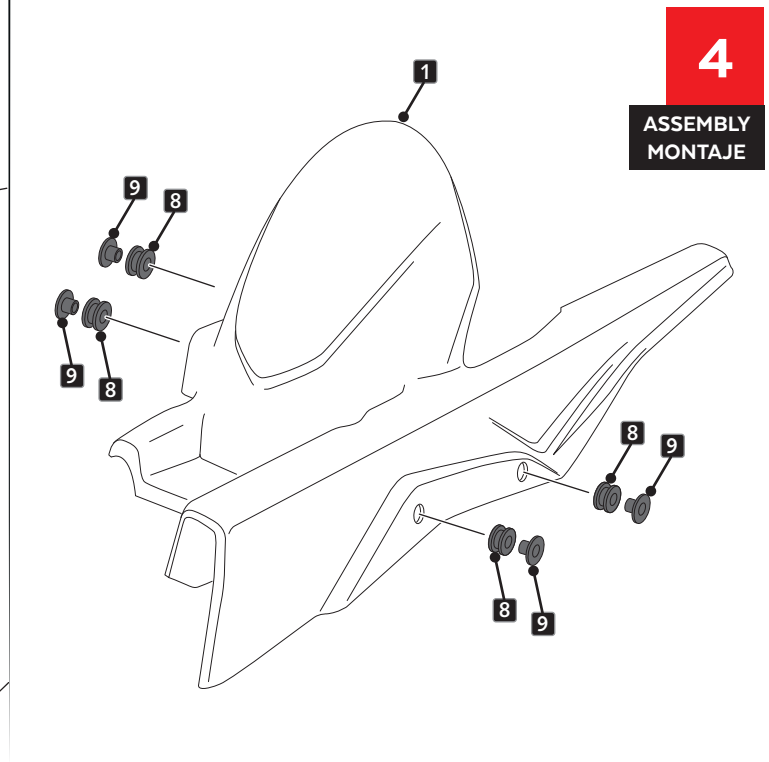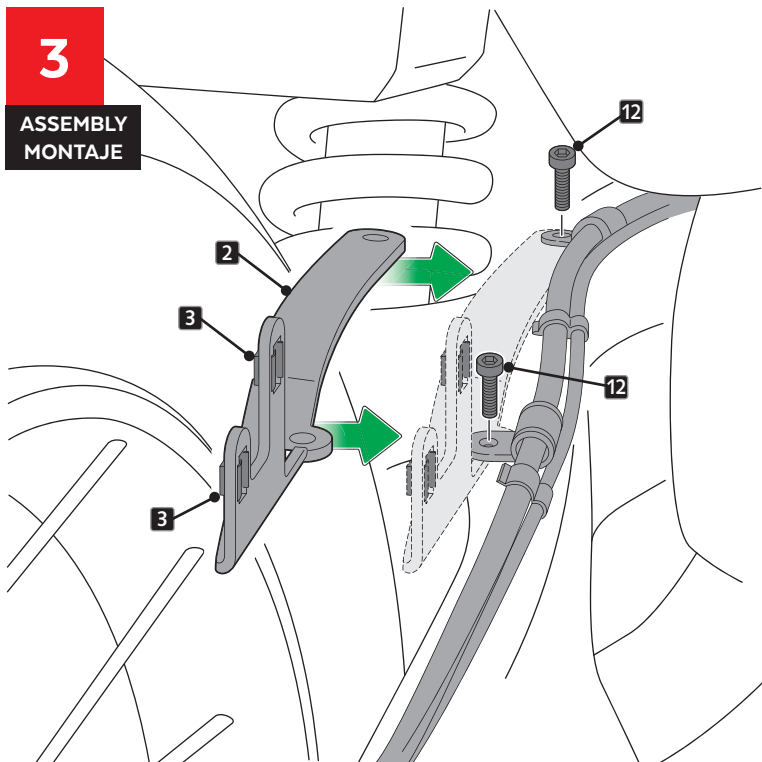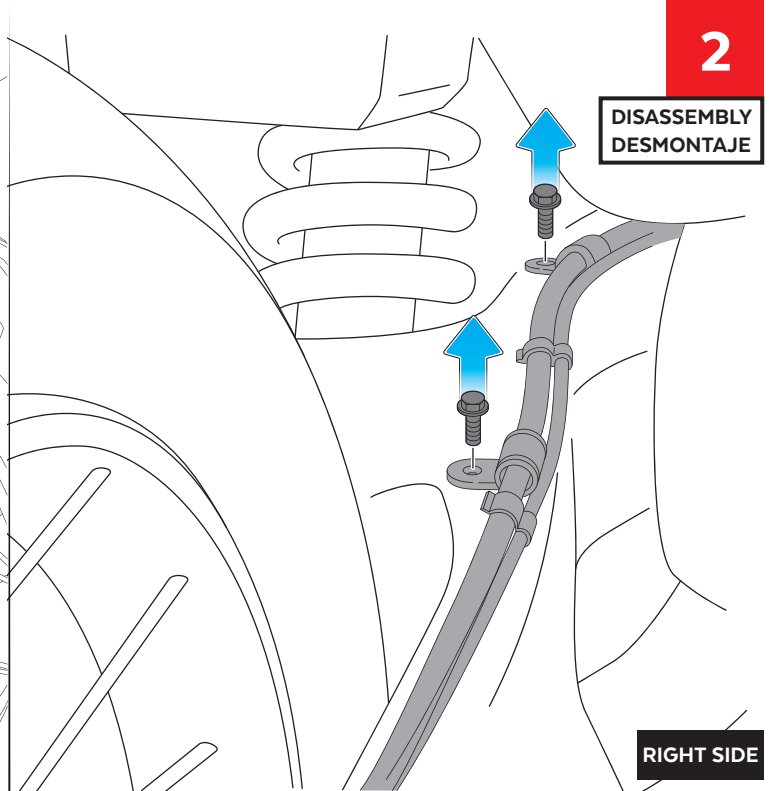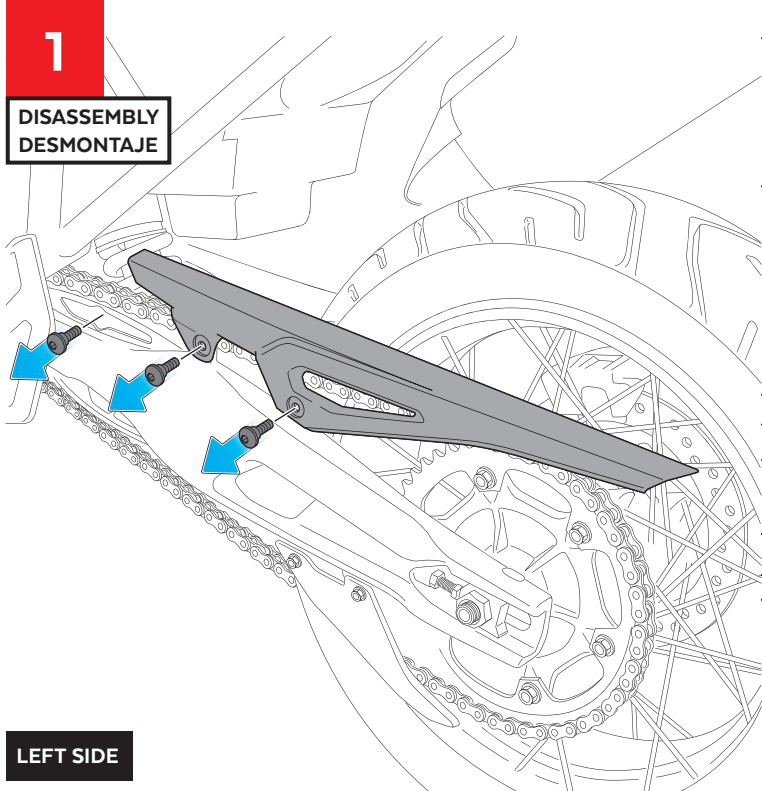


# TRIUMPH TIGER 900 GT / GT LOW / GT PRO / RALLY / RALLY PRO '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

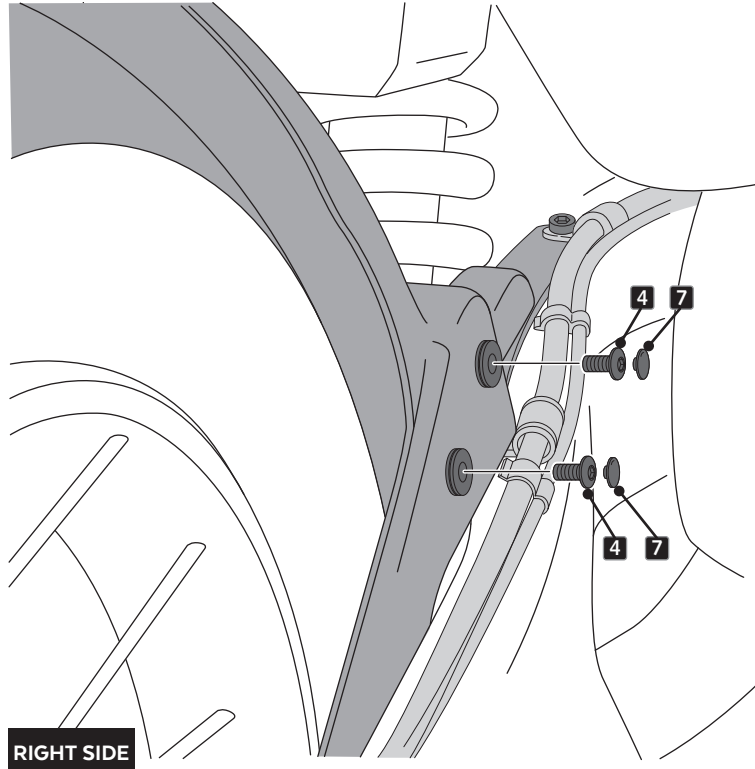

**6**

ASSEMBLY  
MONTAJE

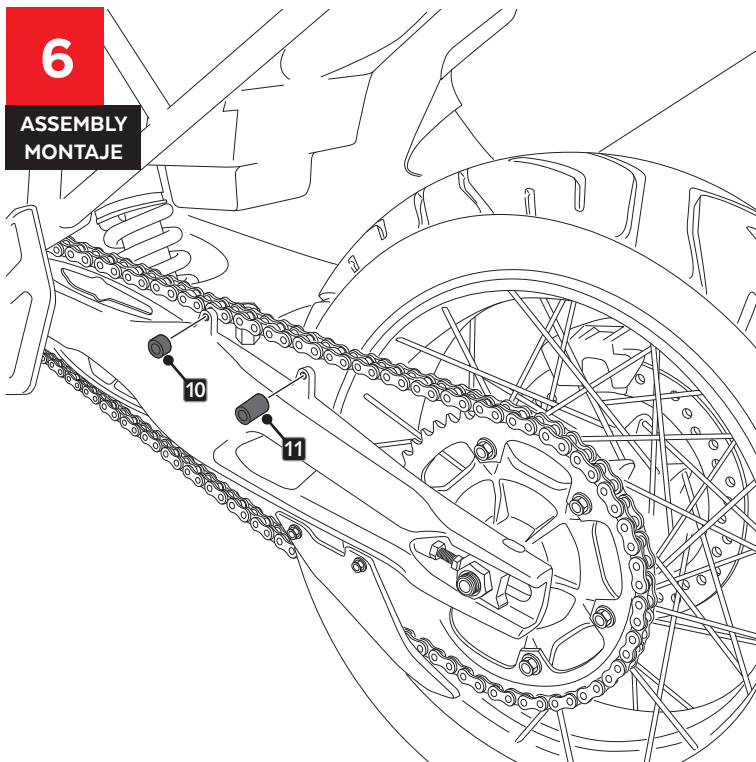

**7**

ASSEMBLY  
MONTAJE

