


# DUCATI MONSTER 937 '21-

## M O U N T I N G I N S T R U C T I O N S

REF 20714

QUILLA / ENGINE SPOILER

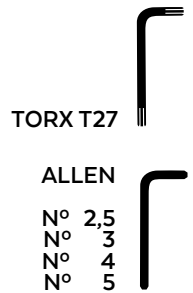


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Quilla lateral derecho (ABS)	Engine spoiler right side (ABS)	1	20714C/JM3
2		Quilla lateral izquierda (ABS)	Engine spoiler left side (ABS)	1	20714C/JM3
3		Quilla central Superior (Aluminio)	Upper central engine spoiler (aluminum)	1	SOPOR6P3CS20714
4		Quilla central Inferior (Aluminio)	Lower central engine spoiler (aluminum)	1	SOPOR6P3CI20714
5		Soporte rosca inferior (Aluminio)	Lower nut support (aluminum)	1	SOPOR6P3RI20714
6		Soporte izquierdo (Aluminio)	Left support (aluminum)	1	SOPOR6P3L-20714
7		Soporte central (Aluminio)	Central support (aluminum)	1	SOPOR6P3C-20714
8		Soporte derecho (Aluminio)	Right suport (aluminum)	1	SOPOR6P3R-20714
9		Tornillo M6x16 Ø14 ISO 7380	M6x16 Ø14 ISO 7380 Allen screw	2	TORNI-I7380-403
10		Tornillo M4x16 Ø9 ISO 7380	M4x16 Ø9 ISO 7380 Allen screw	7	TORNIAI7380-310
11		Arandela de nylon M4x0,5	M4 nylon washer	7	ARNV00000000311
12		Silentblock M4	M4 silentblock	6	SILENBTM4---062
13		Silentblock Ø9 xØ6 x8mm	Ø9 xØ6 x8mm Silentblock	6	AROPASACABLES-1
14		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	6	CASQUI-1A---750
15		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	6	TORNI-I7380-493
16		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	6	TAPON-----85

# DUCATI MONSTER 937 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

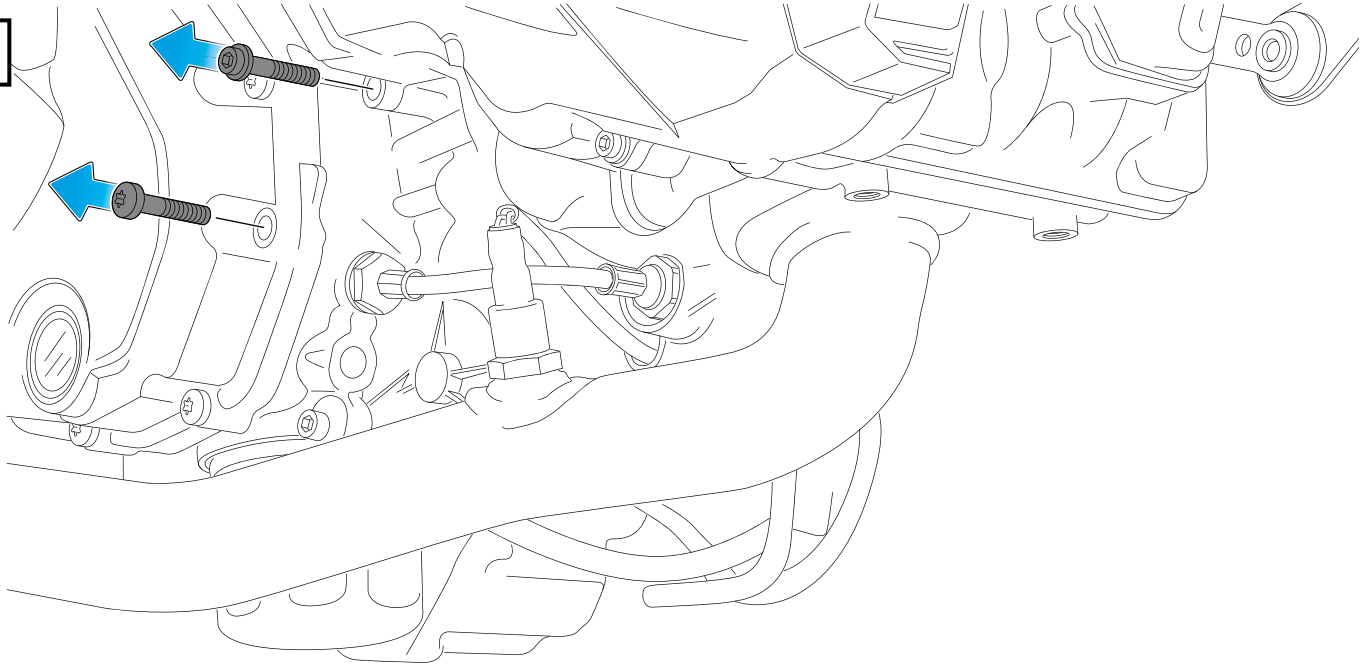

**2**

**ASSEMBLY  
MONTAJE**

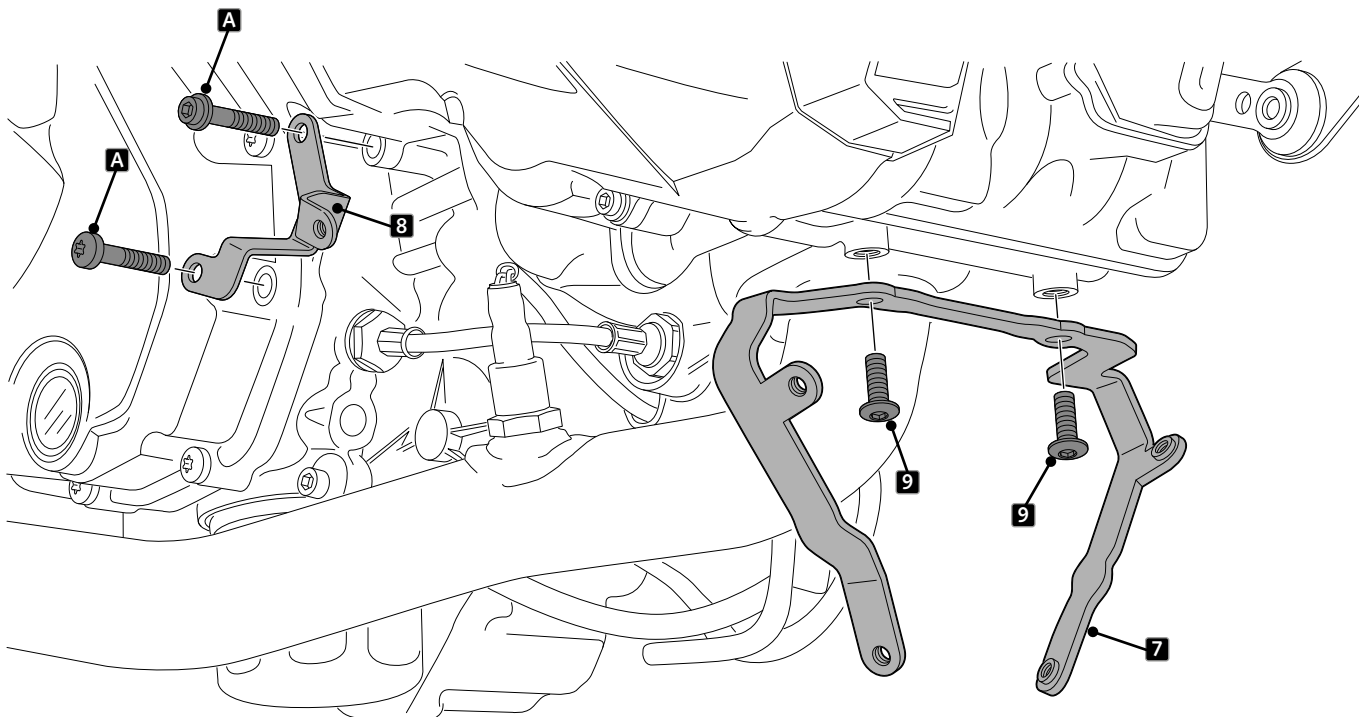


**A** PIEZA ORIGINAL  
ORIGINAL PART

# DUCATI MONSTER 937 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**3**

ASSEMBLY  
MONTAJE

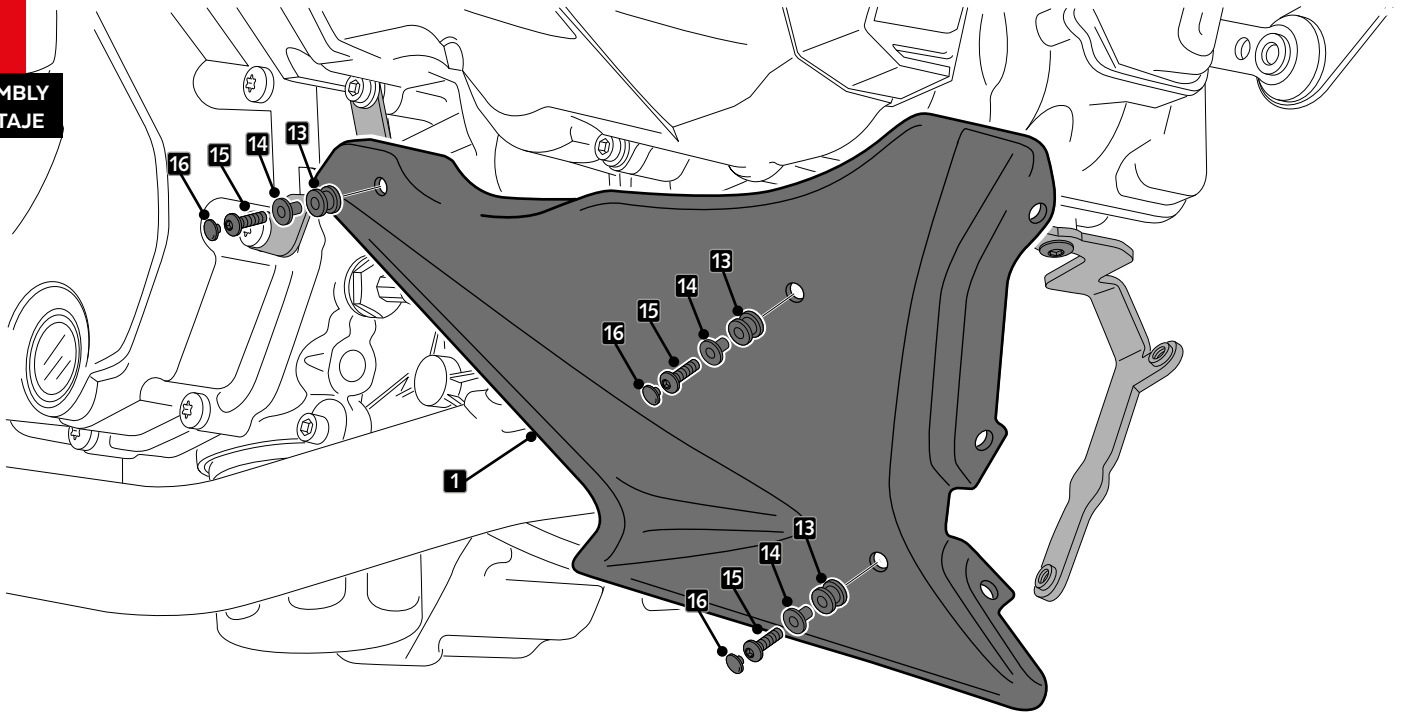

**4**

ASSEMBLY  
MONTAJE

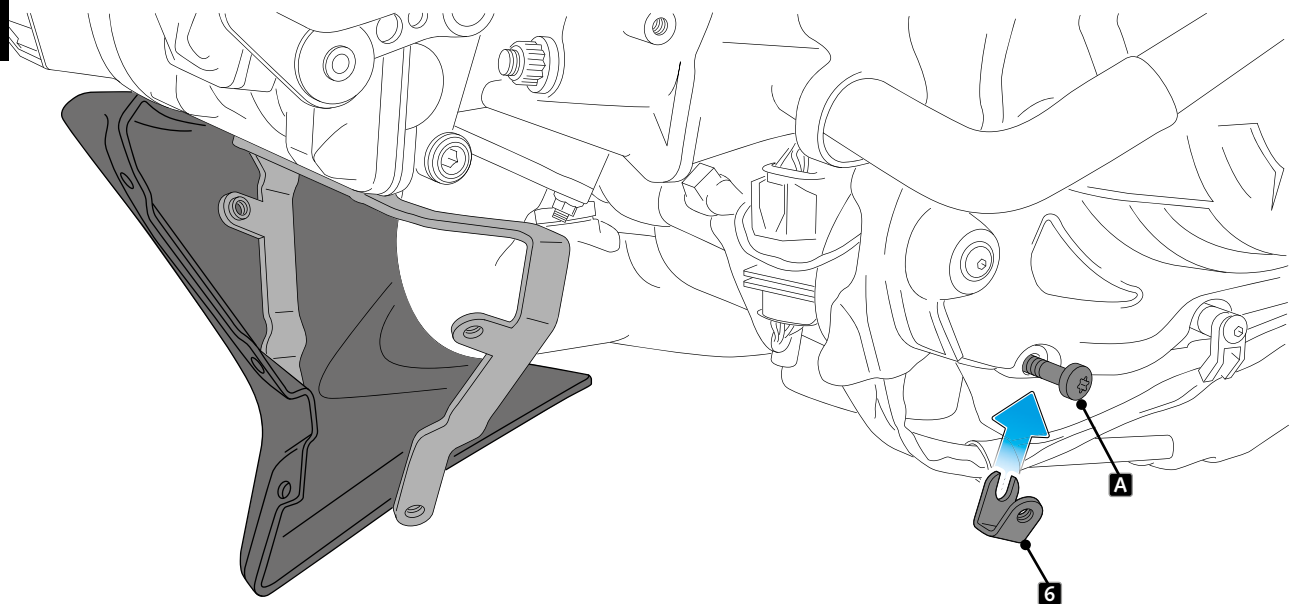


**A** PIEZA ORIGINAL  
ORIGINAL PART

# DUCATI MONSTER 937 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

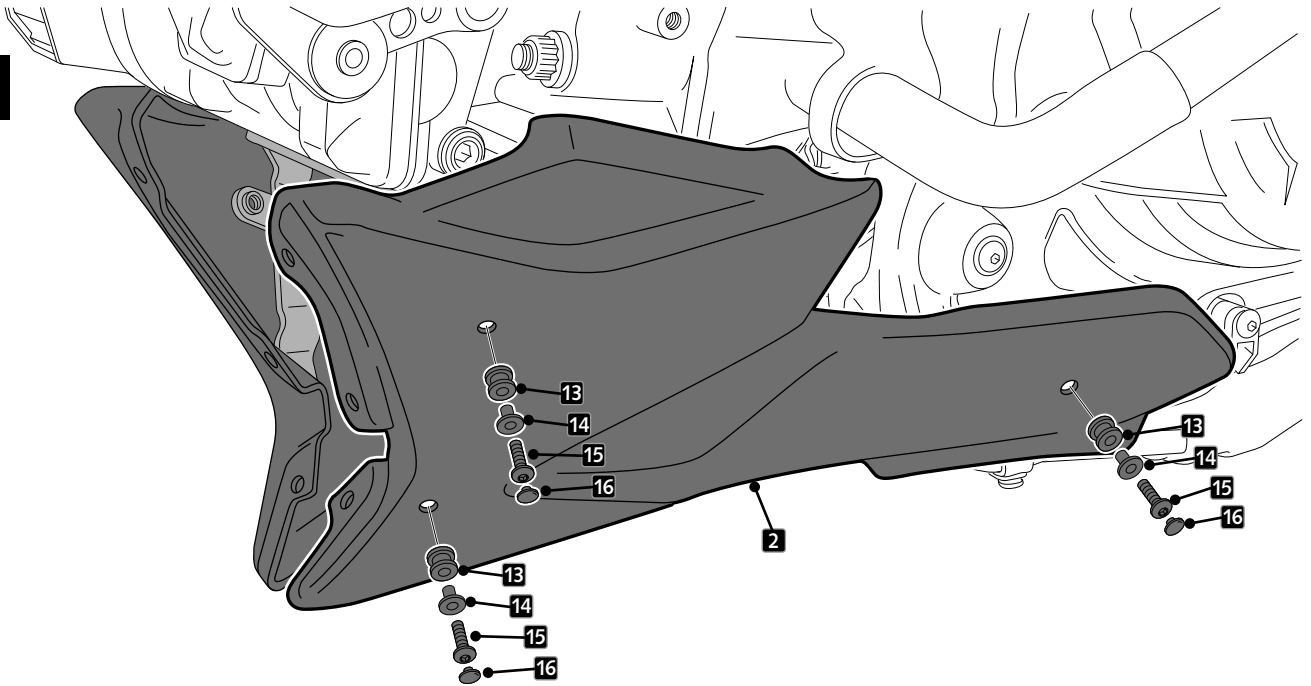

**6**

ASSEMBLY  
MONTAJE

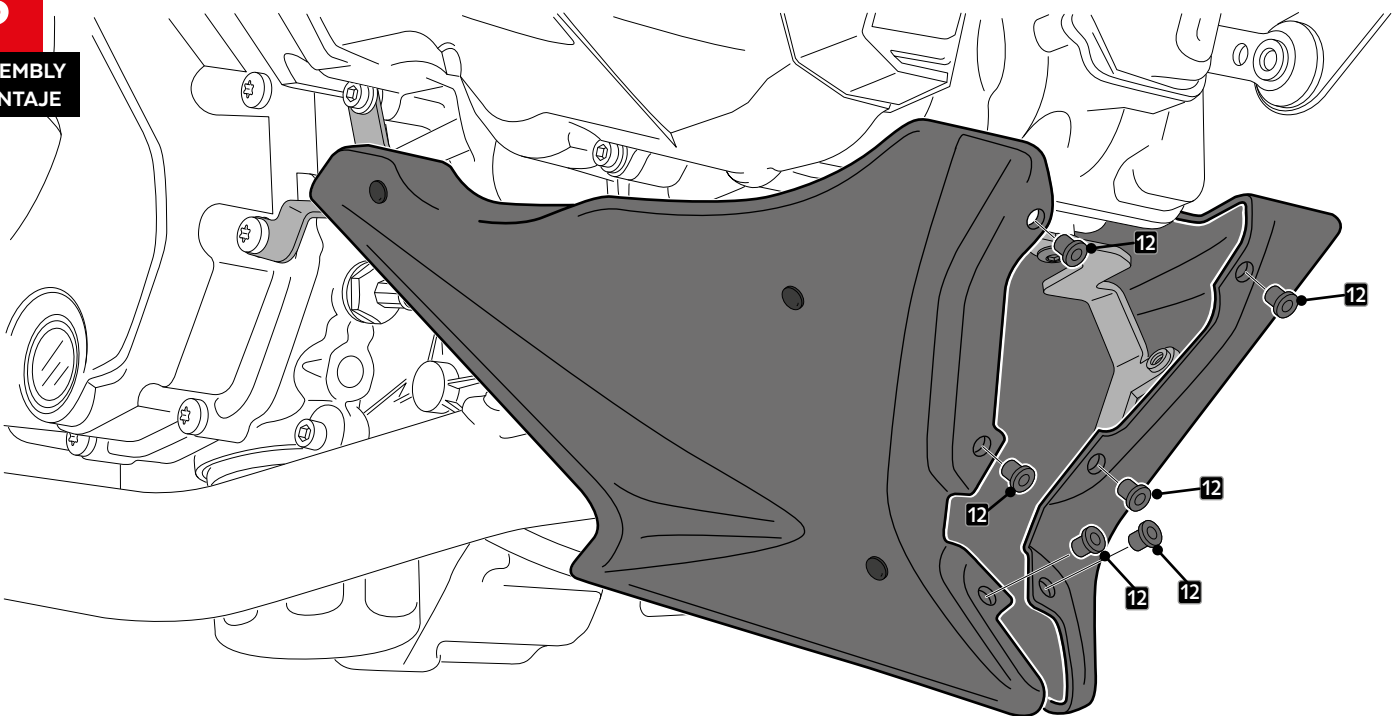


# DUCATI MONSTER 937 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**7**

ASSEMBLY  
MONTAJE

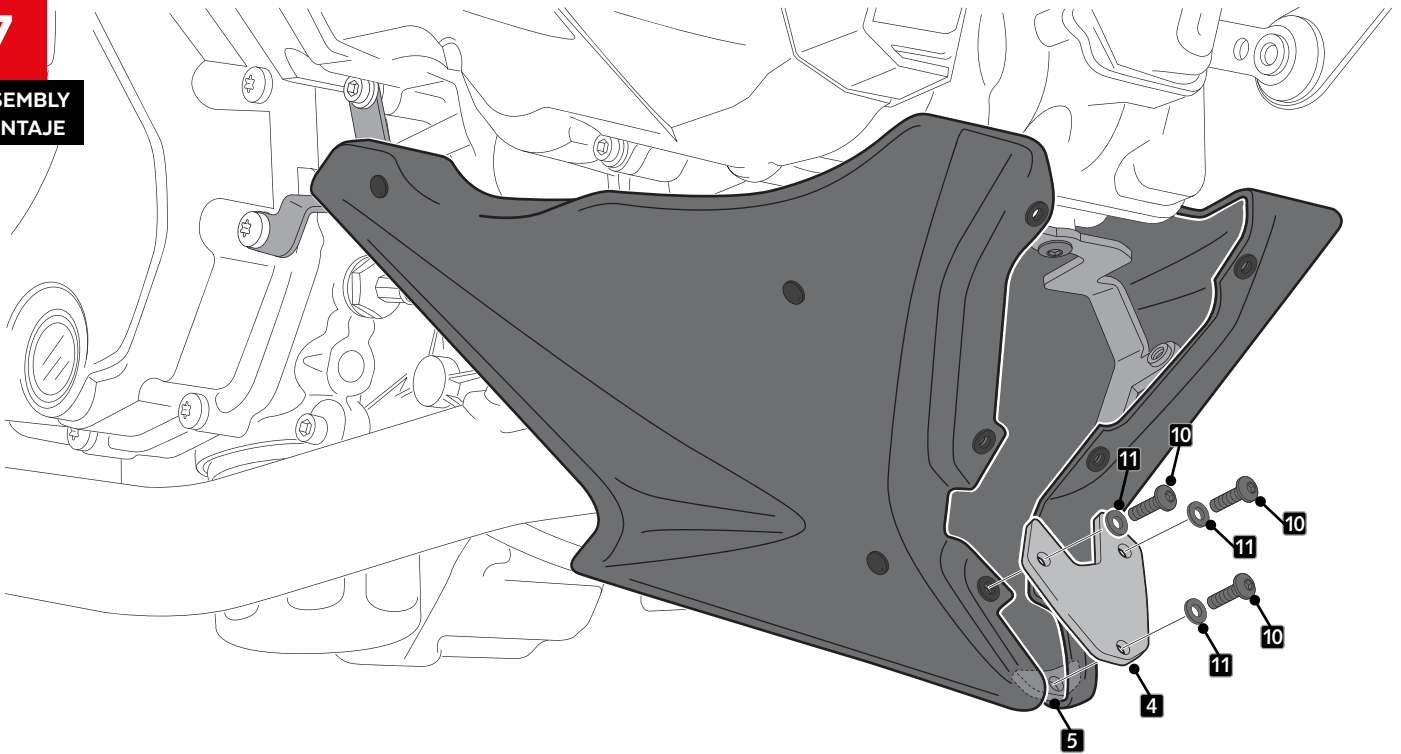

**8**

ASSEMBLY  
MONTAJE

