


SHAD


HONDA CB 500F / CBR 500R '14 KIT TOP H0CF54ST

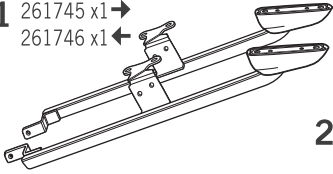

1 261745 x1 →
261746 x1 ←



2 261743 x1 →
261744 x1 ←



3 260417 x2
Ø16 Ø9 x 16



4 303020 x 6
Ø8



5 304036 x2
M8 x 45 Din 7380



6 304074 x4
M8 x 20 Din 912



7 303018 x4
Ø8



8 304053 x4
M8 x 30 Din 7380



! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

