


SHAD

PEUGEOT PULSION 125 RS '19-'20

KIT TOP POPL19ST

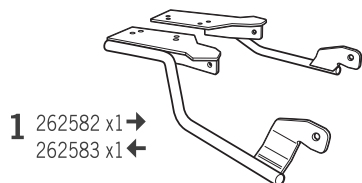

1 262582 x1 →
262583 x1 ←



2 260740 x2
Ø20 Ø11 x 11



3 303025 x 6
Ø10



4 304223 x2
M10 x 35 Din 7380



5 304051 x2
M10 x 25 Din 7380

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

