

SHAD


VOGE 500 DS '20
VODS50IF

3P
SYSTEM

DESIGNED IN
BARCELONA



1 262695 x1

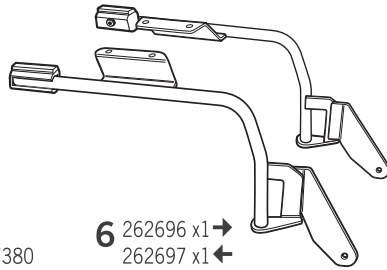

6 262696 x1 →
262697 x1 ←




2 260493 x2
Ø20-12 Ø8,5 x 14-3



3 260686 x2
Ø16 Ø9 x 8



4 303045 x14
Ø8



5 304169 x2
M8 x 50 DIN 7380



7 304028 x6
M8 x 25 Din 7380



8 302024 x4
M8

WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D


Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

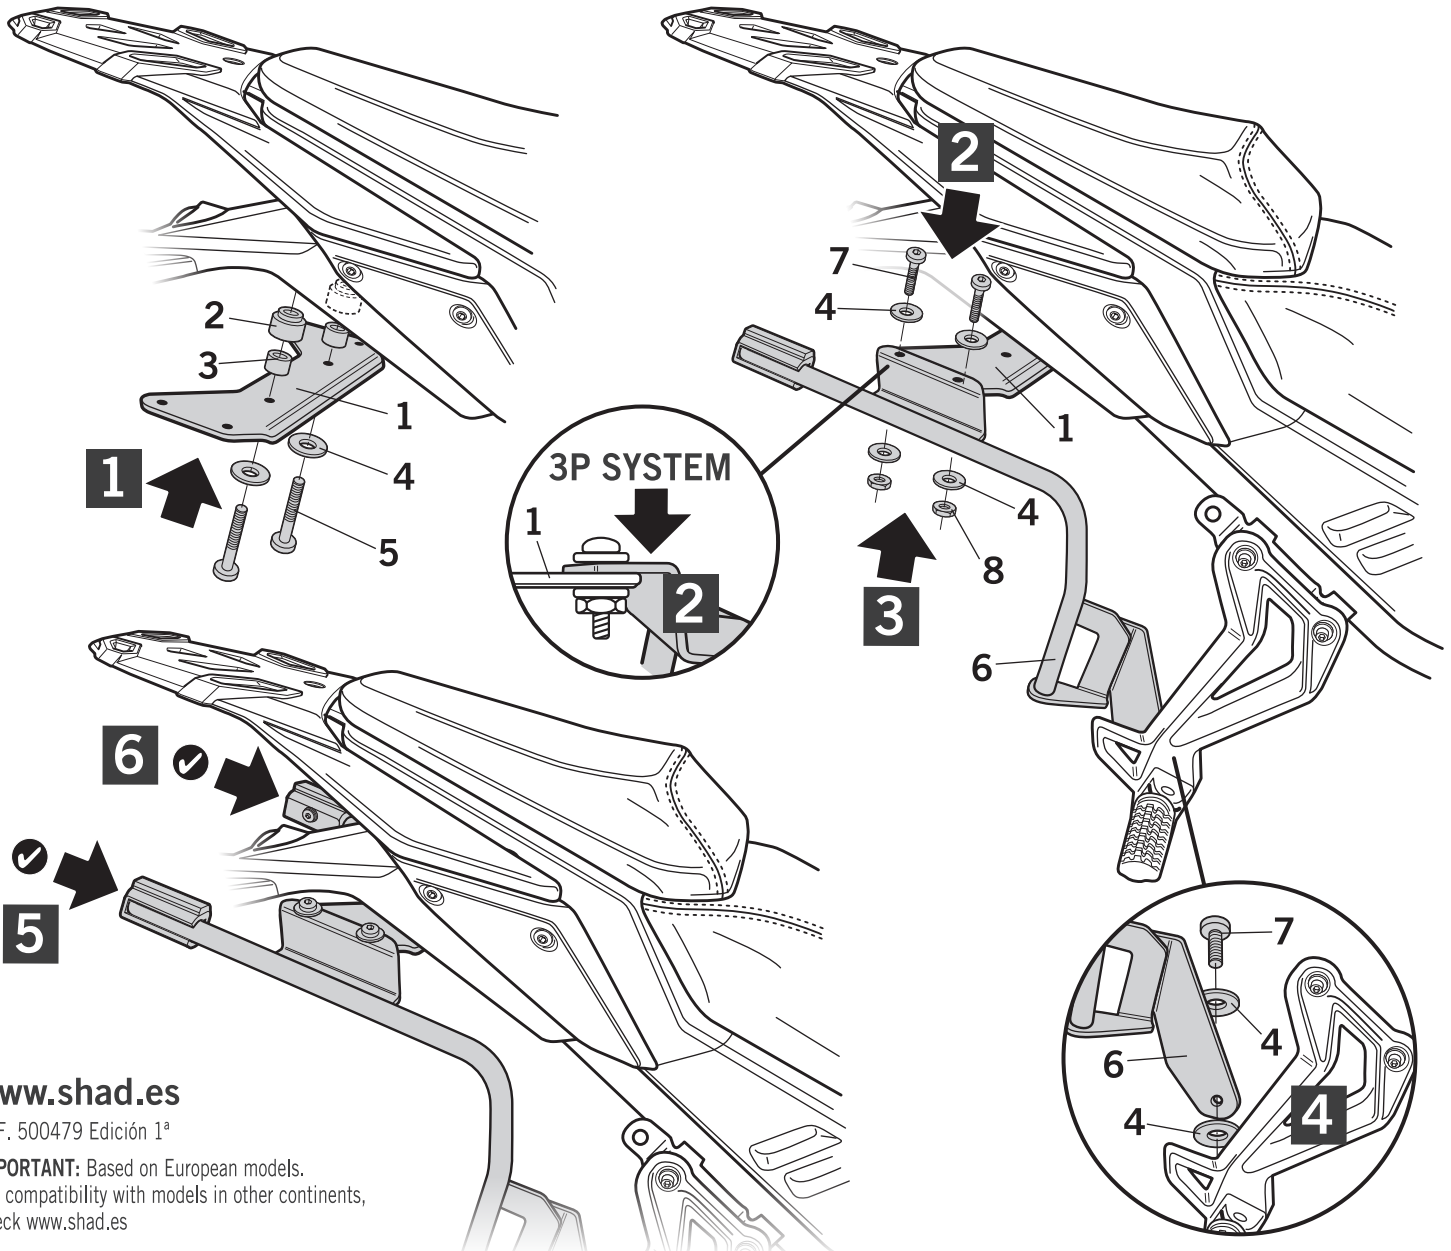

www.shad.es

REF. 500479 Edición 1ª

IMPORTANT: Based on European models.
For compatibility with models in other continents,
check www.shad.es